



1- Remove the rubber protections.

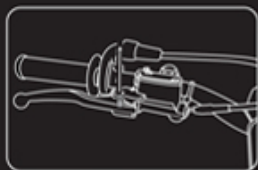

2- Remove the original screws.



A - 2 pcs

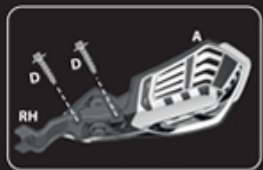

3- Fix the handguards (A) to the side mount brackets (LH)/ (RH) with the screws (D).



4- Attach the handguards to the handlebar using the bushings (see tab.1), the screws (C) and the washers (I).



LH - 1 pcs



RH - 1 pcs



C - 2 pcs



D - 4 pcs



5- Fix the brackets with the bands (H).



TAB. 1



E - 2 pcs



F - 1 pcs



G - 1 pcs



H - 2 pcs



I - 2 pcs

MOUNTING KIT INCLUDED