



Installation Instructions For Part **45-1299WLED** and **45-1299ALED** GL1800 2012 Headlight Cover Trims with LED's

NOTE: Read all instruction prior to installation.

1. Place motorcycle on center stand.
2. Remove windscreen garnish in accordance with the service manual.
3. Test fit head light cover trim lights for proper fit.
4. Clean location of light with alcohol swab.
5. Remove backing from two sided tape, press the light firmly in place and hold for at least one minute.



45-1299ALED

45-1299WLED

NOTE: Prior to making electrical connections ensure motorcycle ignition is off or battery is disconnected.

NOTE: The following wire connections are only a recommendation. Connections may be made at other locations as you see fit.

6. Route wires under windscreen garnish.
7. Located under mirror boot you will find a three wire harness servicing mirror running and turn signal lights.
8. Using "T" taps provided, connect head light cover trim lights to motorcycle wiring.

Wiring Instructions for part installation:

45-1299WLED Running - Yellow	451299ALED Running - Yellow
Turn Signal - White	Turn Signal - Red
Ground - Black	Ground - Black

GL1800 2012 Motorcycle Wiring


Right Side: Running - Dark Blue/White
Turn Signal - Light Blue
Ground - Green

Left Side: Running - Orange/White
Turn Signal - Orange
Ground - Green

Looking
at the
front of
the
bike:



Left Side

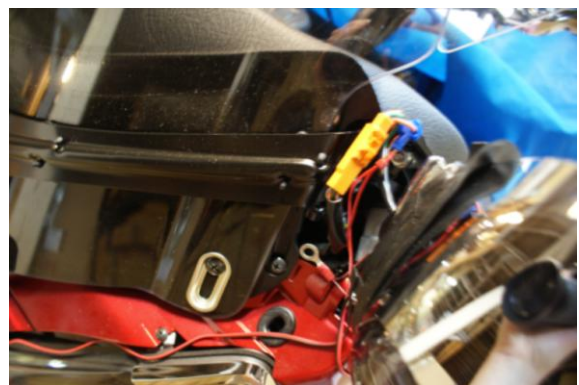

Right Side

9. Test light for proper operation.
10. Install windscreen garnish in accordance with service manual instructions.

NOTE: Do not drive motorcycle for 24 hours to allow two sided tape to set properly.