


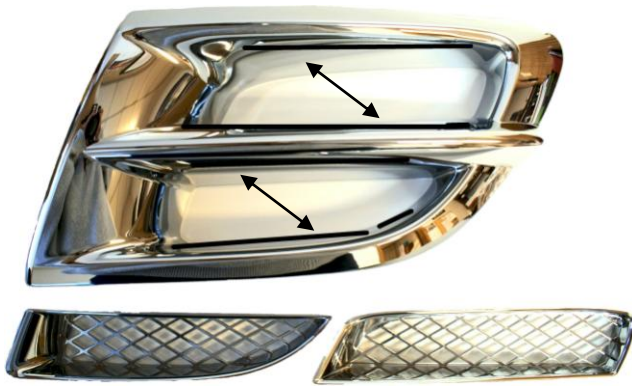

**MOUNTING INSTRUCTIONS**  
**For 45-1629NUC**  
**GL1800 Chrome Mesh Grill Accents**

**NOTE: Read instructions thoroughly before installing. Work one side at a time.**

1. Place bike on center stand.
2. Thoroughly clean outside surface of the chrome air intake area where inserts will be install with rubbing alcohol pads- provided.
3. Using the silicone provided, run a bead of silicone as shown in figure 1 or on the original side fairing in the same manner.
4. Carefully place insert mesh into place.
5. Press the accent into place.
6. Using two wire ties, secure the chrome accent by wrapping the wire ties through the original radiator grill as shown in figure 2. **Note: You may want to use masking tape or a soft material to protect the chrome or painted surface while placing the piece on the bike.**
7. Repeat on the other side.
8. Wait at least 12 hours before removing wire ties.



**Figure 1**



**Figure 2**