




Installation Instructions GL1100 Driver Backrest Part 673-816K

Read instructions thoroughly before installing.

Quantity Parts List

- | | |
|---|--|
| 1 | Right Mount Tube |
| 1 | Left Mount Tube |
| 2 | M6 Screws and Washers |
| 2 | Clamp Brackets |
| 2 | Hand Knobs |
| 2 | ½" Long Black Spacer |
| 1 | U-Clamp |
| 2 | ¼-20 x 3 Screw |
| 2 | ¼-20 Lock Nut |
| 2 | M8 Internal Tooth Lock Washer for Knobs |
| 1 | Pad Mount |
| 2 | ⅛" Spacers for Mounting Bracket |
| 1 | Backrest Pad with Permanently Attached Pouch |
| 2 | Loop Sleeves |
| 4 | Flat Washers |

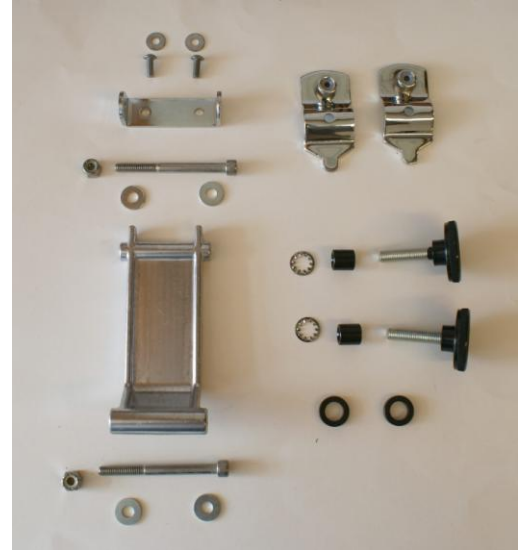

ASSEMBLE BACKREST PAD AND LOOP

1. Install loop covers. Figure 1. Starting at the top of the loop on one side, place cover around the loop tube with the zipper facing toward the seat. Zip close. Repeat on other side.

Note: Loop covers are required for use on the loop tube assembly to protect the seat from abrasion damage from the steel tube rubbing on the seat. The covers will also protect the passenger's legs.

2. Mount U Clamp to the back of the backrest pad. Figure 2.

3. Mount the backrest mount to the loop. Figure 3.

4. Mount the backrest mount to the backrest pad. Figure 4



Figure 1



Figure 2 (U-clamp)



Figure 3

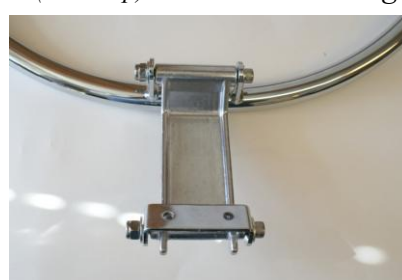


Figure 4

Installation Instructions GL1100 Driver Backrest Part 673-816K CONTINUED

5. Adjust back or forward with hand knobs, Figure 5, and slide on tubes. Retighten hand knobs securely when complete.



Figure 5

INSTALLATION OF BACKREST ON BIKE

1. Remove saddlebag cover and loosen top front saddlebag mount screw to ease assembly.
2. Remove motor mount screw shown and rear shock nut.
3. Position mount tube in place and attach at front as shown. Tighten motor mount screw and shock nut securely making sure shock nut fits inside shock washer. Retighten saddlebag screw and replace cover.
4. Remove both hand knobs and clamps. Place backrest tube assembly over mount tubes and replace clamps and hand knobs with spacers.

