



## INSTRUCTIONS FOR MK-D DRIVER MUGGER 45-1223

1. Remove the two 6mm socket head screws from the clutch or brake perch. Figure 1.
2. Place the new 6mm bolts through the mounting tab with the long spacers and into the perch as shown and tighten properly. Figure 2.
3. Mount the mugger drink holder to the tab with the remaining screw, short spacer and lock nut into the top center hole of the mugger. Figure 3. Leave it loose enough so that it will swing.

**CAUTION: Do not exceed 0.85 pounds. LIMITED WARRANTY: Add On Inc. warrants that any of their products sold here under, if properly installed, maintained and used under normal conditions shall be free from defects in material and workmanship for a period of one year from the date of purchase. CONSEQUENTIAL DAMAGES. Add On Inc. shall not be liable for any consequential or incidental damages what so ever.**



Figure 1

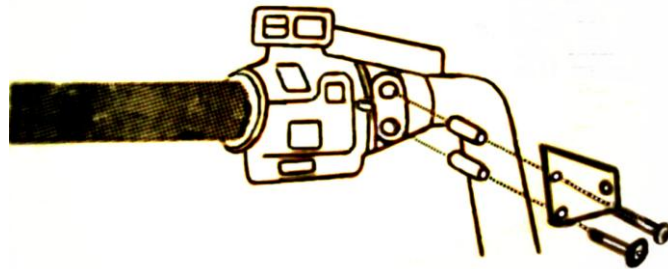


Figure 2



Figure 3

