

MC4B432 | Mega Grip Motorcycle Handlebar Phone Mount

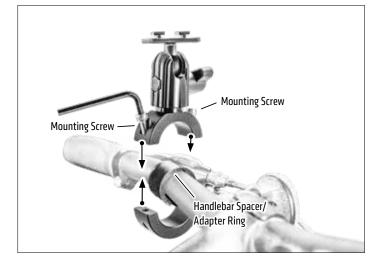

Place handlebar spacer/adapter ring around handlebar. Attach mount to handlebar around spacer. Use the included hex key to securely tighten both mounting screws.

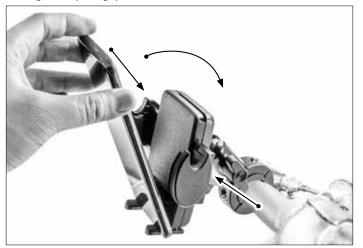

Place the phone into the holder with the device sitting on the support legs. Clamp the grip arms inward to secure the device in the holder.




Safety Precautions Arkon is not responsible for any damages caused to your vehicle, your device, or yourself due to the installation or use of this mount.

Package Contents:

(1) MC4B01B – Motorcycle Handlebar Mount (1) APBALL2T – 20mm Ball to Dual T-Tab Adapter (1) SM040-2 – Mega Grip Universal Phone Holder

This Motorcycle Mount fits cylindrical handlebars up to 30mm diameter and comes with 3 handlebar spacer/adapter rings of different widths. Select the appropriate size for optimum mounting to your handlebar.

2 Attach holder by inserting the mount's Dual T-Tabs into the holder's Dual T-Slots on the back of the holder.

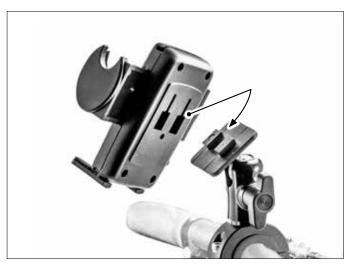

Press release button to open mount arms.



