

BikeMaster®

INSTRUCTIONS: Tire Repair Kit P/N 151637




KIT INCLUDES: *Please verify that everything is included*

- Awl
- Insertion Tool w/ tip
- Rubber Plugs
- Rubber Cement
- Trimming Knife

in your Tire Repair Kit prior to using.

1. Screw the Awl into the Insertion Tip.

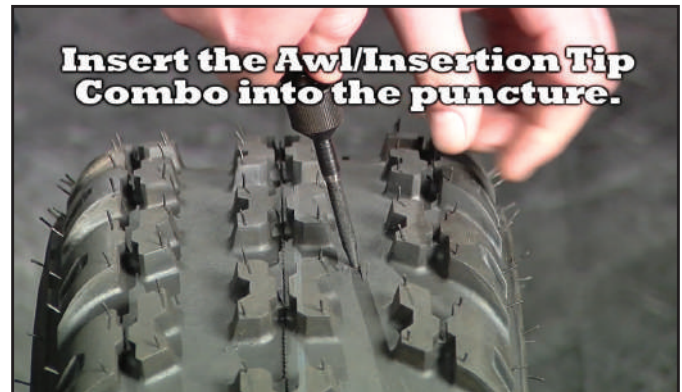

2. Insert the Awl/Insertion Tip into the puncture of the tire.



3. Unscrew the Awl and remove it, leaving the Insertion Tip in tire. Apply the rubber cement to the rubber plug.

(Be sure to use enough cement to lubricate the plug)





BikeMaster®



INSTRUCTIONS: Tire Repair Kit P/N 151637



4. Insert the plug (large end down) into the Insertion Tip.

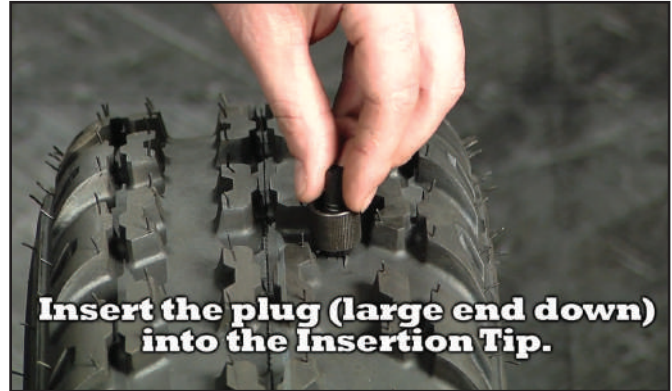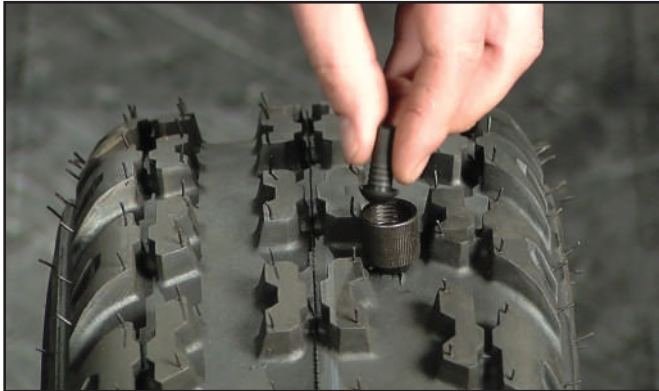

5. Screw the threads of the Insertion Gun onto the Insertion Tip. Grip the Insertion Gun and squeeze the handle. Forcing the plug through the Insertion Tip.

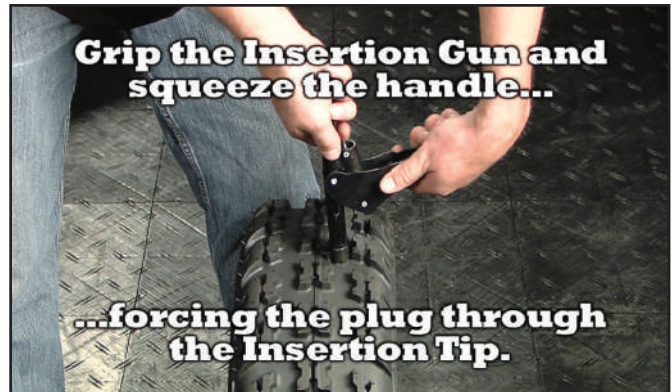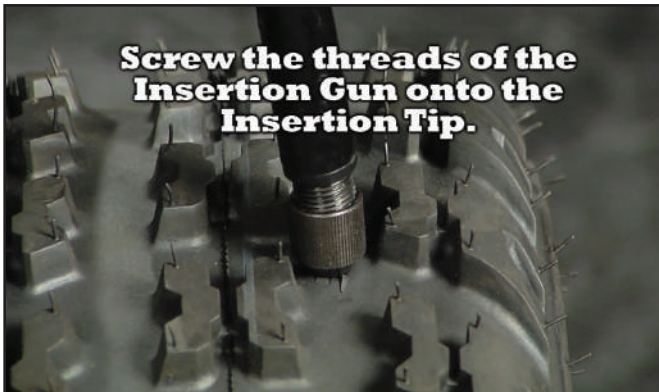

6. Slowly remove the Insertion Gun and Tip from the puncture. Revealing the tail of the rubber plug. Trim the exposed rubber plug with the (included) trimmer blade)

