

# COBRA

## Items Supplied >

- 1 – Freeway Bar
- 2 – M6 x 20 mm Flanged Bolts with Loctite®, (2)
- 3 – 6 mm Flat Washers, (2)

## Application >

Yamaha V-Star 650 Classic 98-10

## Instruction Manual >


01-1201

Page 1 of 1

**\* Read all instructions carefully and completely before installing your new Cobra freeway bar \***

1. Remove M8 Bolt from horn mount and set aside.
2. Remove the (2) M6 bolts from the plastic frame cover, just below lower triple clamps, (Fig. 1.)
3. Remove the lower left and right M10 bolts (1 per side), from the floorboard mounts and set aside.
4. Slide the new Cobra freeway bar with the lower mounting brackets towards the rear of the motorcycle and insert the (2) M10 bolts from step 3 through the bar mounts, floorboard mounts and into frame, do not tighten at this time.
5. Rotate top of freeway bar back towards frame and gently pull plastic frame covers outwards so that the upper freeway bar mounting bracket is against the frame and the plastic covers are over the mount, (Fig. 1.) Insert (2) supplied M6 bolts through the supplied flat washers, plastic cover, freeway bar and into frame. Tighten the (2) lower M10 bolts and (2) upper M6 mounting bolts to appropriate torque values.
6. Reinstall horn to new mount on freeway bar with M8 bolt set aside from Step 1, (Fig. 2.) Check horn for proper working order.

**\* Before riding vehicle make sure rear brake operates properly \***

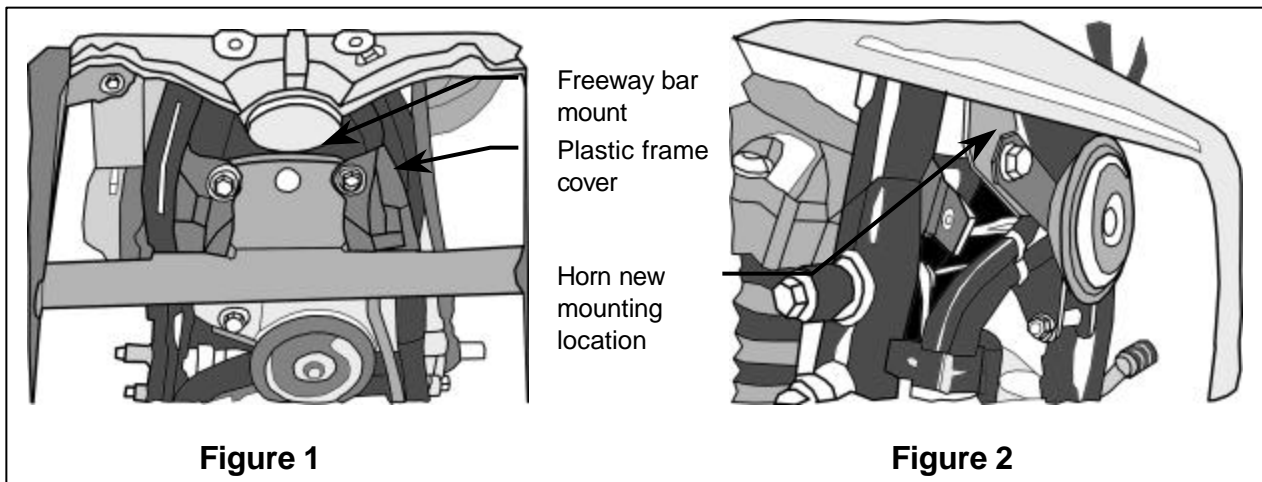

**Cobra Freeway Bars add style to your motorcycle. They are not designed to withstand a serious impact and may not protect you and/or your motorcycle in the event of a crash.**

1. Loctite® is a trademark of the Henkel Corporation, U.S.A.

**\* Cobra recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.**

**Anything's Possible.®**