

COBRA

Items Supplied >

- 1 - Freeway Bar
- 2 - Billet Clamps
- 2 - M8 x 16mm w/ Lock Patch

Application >

HONDA	SABRE	10-14
	STATELINE	10-14
	INTERSTATE	10-14

Instruction Manual >

01-1133 / 01-2133

Page 1 of 2

Before installing your new Cobra® Freeway bar, read all instructions carefully.

1. Remove the left and right rider footpegs with mounts and hardware, retain for later reuse. Keep left and right components separate on their respective sides.
2. Positioning the freeway bar into place will be awkward. Use caution when handling and rotating the freeway bar to avoid damage or scratches to the paint or chrome. Before you begin make sure there is plenty of clearance around the work area. **NOTE:** Interstate models must perform Step 3 on kickstand, not a bike lift.
3. Review Figure 1. (A) Start with the freeway bar upside down, between the front tire and frame rails. (B) Rotate the freeway bar while guiding the bar through the opening above the cylinder head. (C-E) Continue rotating and adjusting the bar until it is right side up.
4. Align the freeway bar's lower mounts with the mounting holes on the frame. The freeway bar's upper bracket should rest against the frame rails. See Figure 2 for final location.
5. Insert the stock left M8 bolts through the footpeg mount, spacers, freeway bar mount and into the frame. Repeat on right side. **DO NOT FULLY TIGHTEN BOLTS.** See Figure 2.
6. Position the (2) supplied billet clamps onto the frame rails and secure with the (2) supplied M8 x 16mm buttonhead bolts. Be careful not to pinch the wire harness when securing the clamps. **DO NOT FULLY TIGHTEN BOLTS.** See Figure 2.
7. Align the freeway bar then fully tighten the (2) M8 x 16mm buttonhead bolts securing the billet clamps making sure they do not rotate. Tighten the (4) footpeg mount bolts to factory specifications.
8. Before riding, make sure that the freeway bar is fixed and rigid.

***Cobra Freeway Bars add style to your motorcycle. They are not designed to withstand a serious impact and may not protect you and/or your motorcycle in the event of a crash.**

*** Cobra® recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.**

Anything's Possible.®

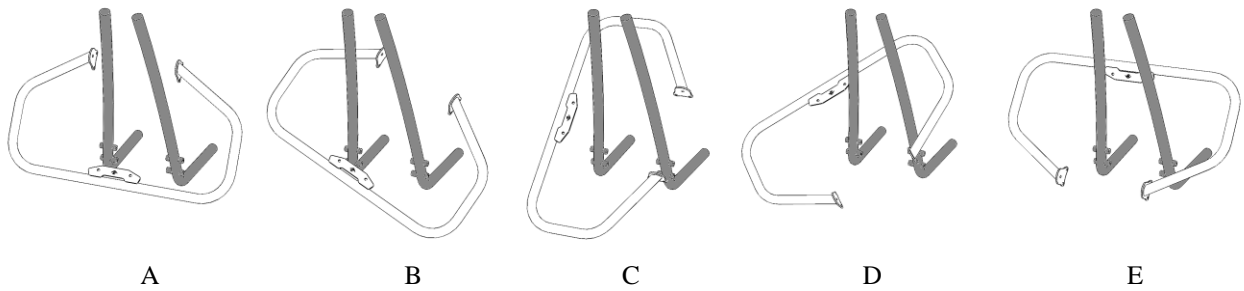


FIGURE 1

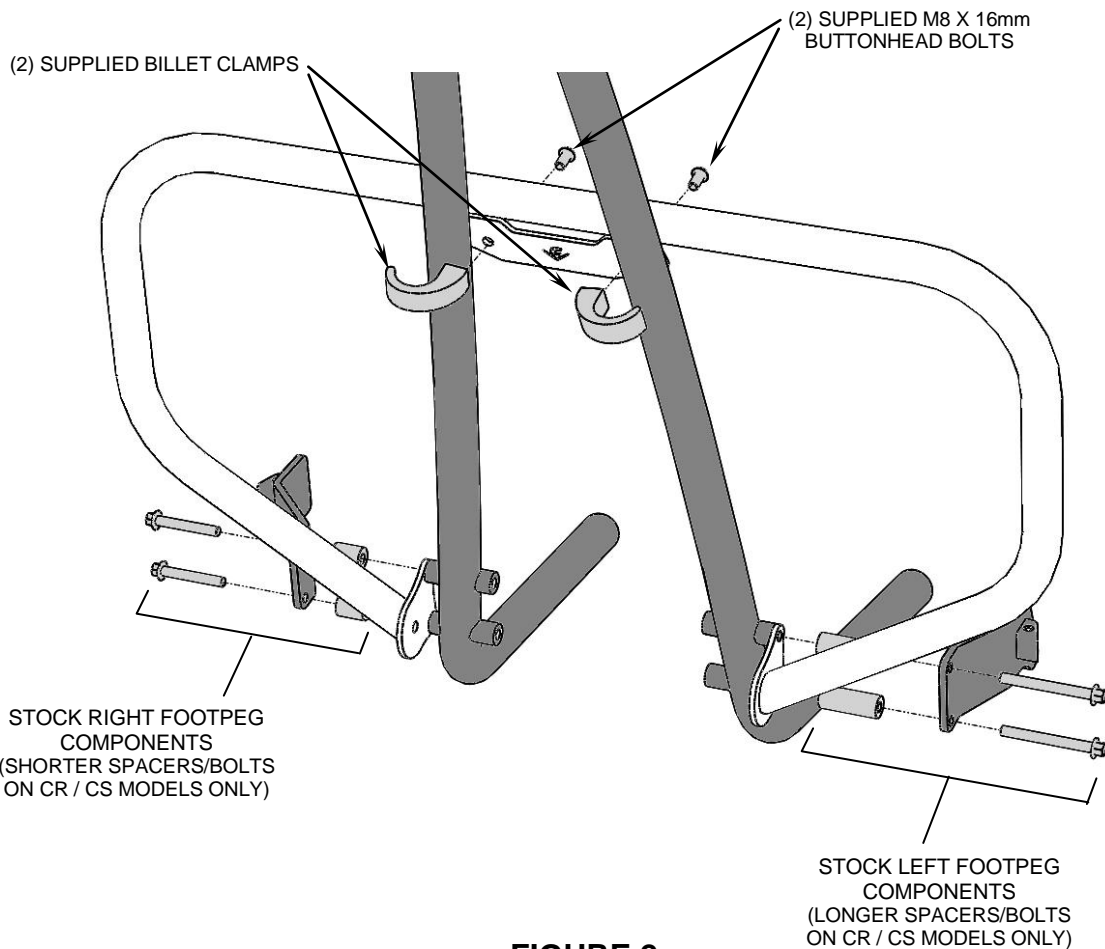


FIGURE 2

(ONLY COMPONENTS RELATED TO INSTALLATION ARE SHOWN)