

## Items Supplied >

- 1 – Sissy Bar w/pad
- 2 – Brackets
- 4 – 8mm x 16mm Button Head Bolts
- 2 – 8mm x 30mm Button Head Bolts
- 2 – 8mm x 35mm Button Head Bolts
- 2 – Long Spacers (Aluminum)
- 2 – Short Spacers (Aluminum)
- 4 – Flat Washers

## Application(s) >

YAMAHA: V-STAR 1100 99-09


## Instruction Manual >

02-4740/02-5240/02-5740

Page 1 of 1

### READ ALL INSTRUCTIONS CAREFULLY AND COMPLETELY BEFORE INSTALLING YOUR NEW SISSY BAR!

1. Remove the two (2) rear bolts on the right fender rail and remove the stock fender rail. CAUTION: remove only one side of the mounting bolts at a time to prevent the fender from rotating or falling.
2. Install the supplied brackets with the bent portion toward the outside (part number inside) using the supplied hardware. Place the long spacer between the fender and bracket in the front and secure using the two (2) 8mm x 35mm Button Head Bolts. Place the short spacer between the fender and bracket in the rear and secure using the two (2) 8mm x 30mm Button Head Bolts. Do not fully tighten bolts. **Note: V-Star 1100 classic owners, use (4) flat washers in place of aluminum spacers**
3. Install the sissy bar to the brackets using the four (4) supplied 8mm x 16mm bolts then tighten all bolts to factory specs.

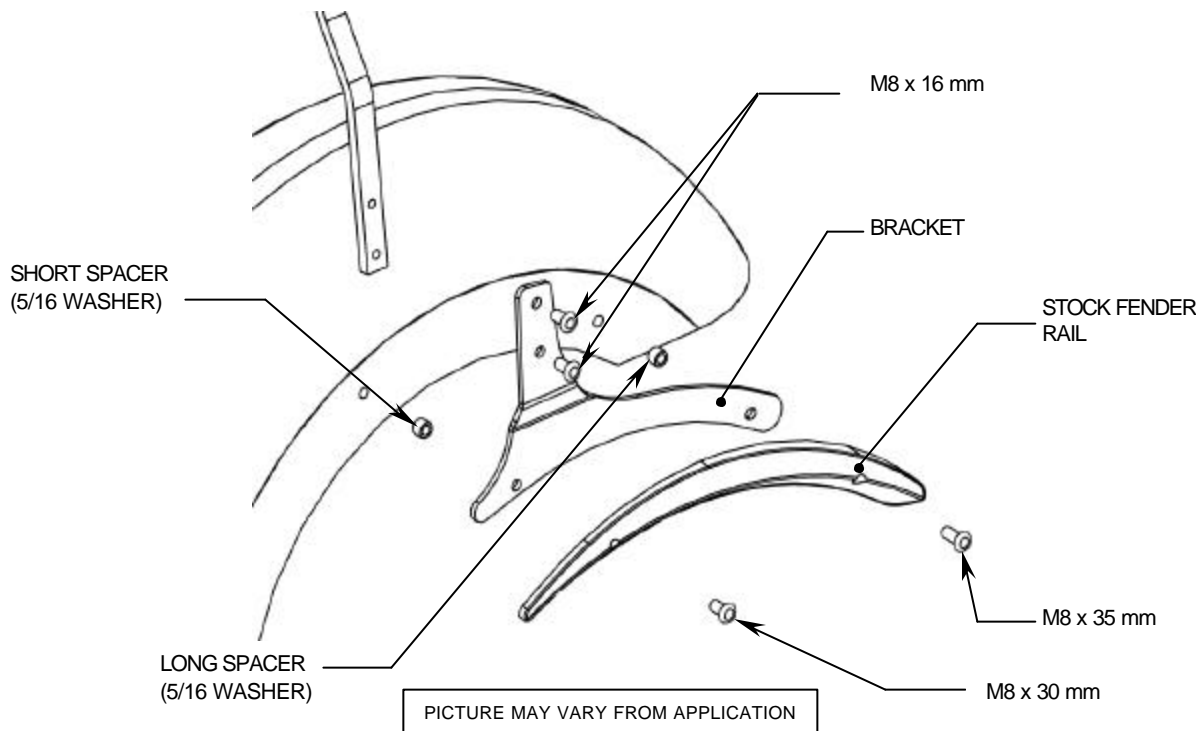

\* *Cobra recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.*

DOCUMENT NO. 0017 REV. B

03/08

Anything's Possible™