

COBRA

Items Supplied >

1 – Backrest Insert

Application(s) >


ALL

Instruction Manual >

Round Bar Backrest Insert

Read instructions carefully and completely before installing your new Backrest Insert.

1. Remove the three screws retaining the pad.
2. Place the insert on the back side of the sissy bar.
3. Reinstall the screws clamping the sissybar between the pad and backrest insert. Tighten screws firmly, checking tightness after a long ride.

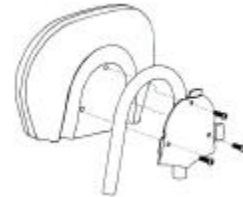

** Cobra recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.*

DOCUMENT NO. 0019 REV. B

11/07

Anything's Possible.

On our website you can discover more about motorcycle seats & backrests.