

## Items Supplied >

- 1 – Sissy Bar w/pad
- 2 – Frame Mount Bracket (Left / Right)
- 2 – Sissy Bar Mount Bracket (Left / Right)
- 2 – Spacer
- 2 – M8 x 20mm Flathead Allen Bolt
- 2 – M8 x 16mm Flathead Allen Bolt
- 4 – M8 x 20mm Buttonhead Bolt w/ Lock Patch
- 4 – M8 x 16mm Buttonhead Bolt

## Application(s) >

HONDA VT1300 CS                      2010-2014

## Instruction Manual >

02-4634 / 02-5134 / 02-5634


Page 1 of 1

### READ ALL INSTRUCTIONS CAREFULLY AND COMPLETELY BEFORE INSTALLING YOUR NEW SISSY BAR!


ATTENTION: Permanent removal of both rear fender reflectors is necessary for complete installation of this product. Consult your local motor vehicle office for vehicle compliance.

1. To remove the fender reflectors it is recommended that a length of fishing line be used to peel the adhesive. Starting from a corner carefully slide the fishing line behind the reflector. Pull line back and forth in a sawing fashion until the adhesive is severed from the rear fender. See Figure 1. Clean any remaining adhesive with a small amount of WD-40 or cleaner wax applied to a clean terry cloth towel. Be sure not to damage the paint.
2. Pull and remove the battery/electrical covers from the both sides of the motorcycle.
3. Remove the seat by first removing the (1) bolt under the rear of the seat. Where the covers were removed in Step 2, locate and remove the (2) bolts securing the underside of the seat. Pull the seat back and up to remove.
4. Remove the (2) plastic fasteners that secure the front end of the fender. NOTE: Depress the center pin on the fasteners to release. Carefully remove the fender.
5. On the fender sub frame locate the threaded bungs (2 per side) and install the left and right frame mount brackets by inserting the (2) M8 X 20mm flathead allen bolts through the mount brackets, supplied spacers and into the frame in the front holes. Insert the (2) M8 x 16mm flathead allen bolts in the rear holes. Fully tighten the bolts. NOTE: The brackets will have an 'L' or 'R' indicating which is left and right. See Figure 2.
6. Reinstall the fender and secure with the two fasteners removed in Step 4. NOTE: To reinstall fasteners pull the center pin out; insert into holes then push the pin flush.
7. Install the sissy bar mount brackets onto the frame mount brackets using the (4) M8 x 20mm buttonhead bolts w/ lock patch. **Do not fully tighten bolts.** See Figure 2.
8. Install the sissy bar to the sissy bar mount brackets using the (4) M8 x 16mm buttonhead bolts. **Do not fully tighten bolts.** See Figure 2.
9. Align the sissy bar from side to side then fully tighten all remaining loose bolts.
10. Reinstall the seat in the reverse order of removal. Reinstall the battery/electrical covers.

\* *Cobra® recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.*

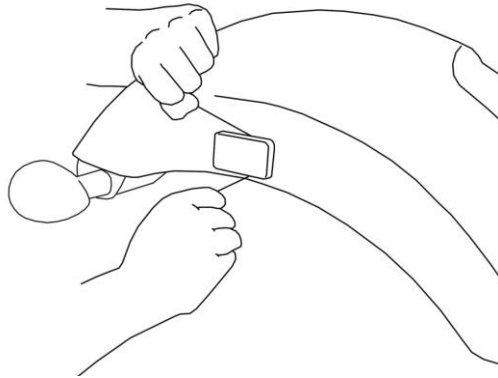

**FIGURE 1**  
REMOVE REFLECTORS FROM BOTH SIDES

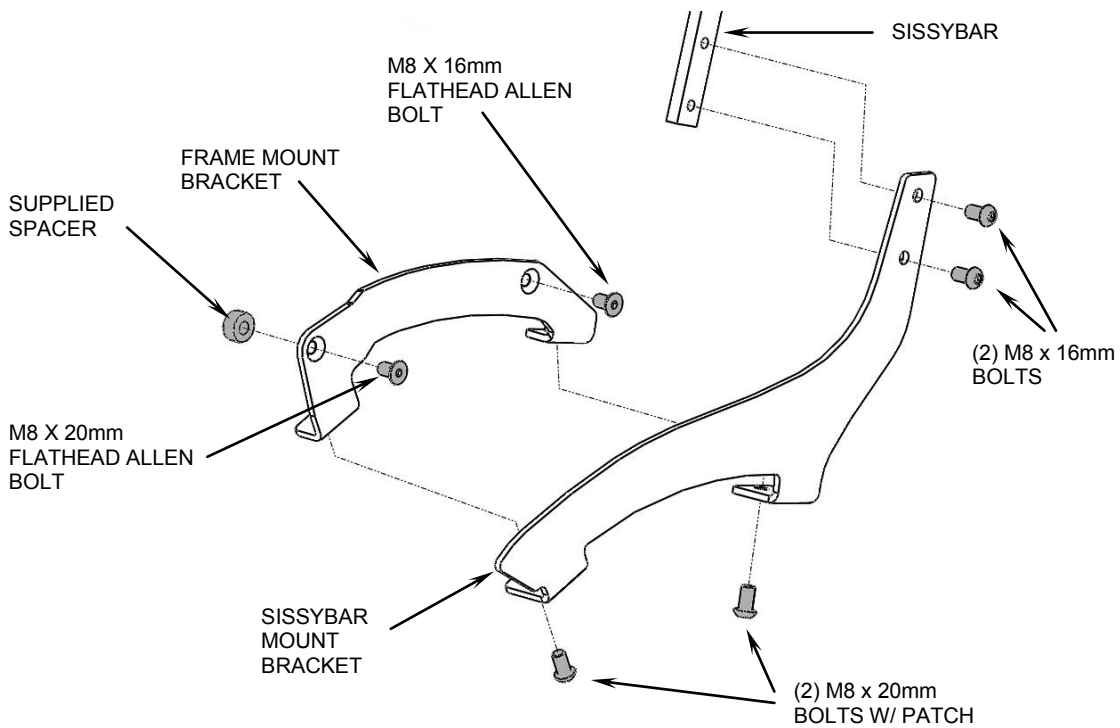

**FIGURE 2**  
LEFT SIDE SHOWN