

COBRA®

Items Supplied >

1 – DRIVE SHAFT COVER


Applications >

Suzuki Boulevard M109 06-14

Instruction Manual >

1. Thoroughly clean the outside surface of the drive shaft, removing any oil or residue where the drive shaft cover will be attached.
2. Peel the backing off of the two sided high bond adhesive strips and carefully place the drive shaft cover into position on the drive shaft against acorn nuts or bolts cover.
3. Press firmly on the drive shaft cover for one minute. **Do not pull on the cover to check how well it is stuck.** The high bond adhesive reaches full strength in 72 hours.

06-0845

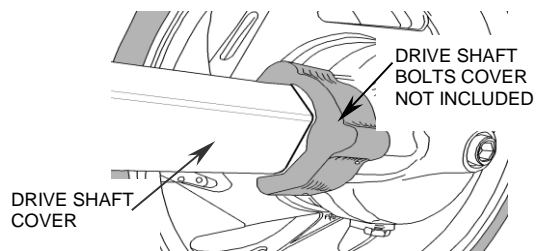

**Cobra® recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.*

Anything's Possible.®

Rely on premium custom motorcycle accessories and trim by Cobra USA if you're looking for quality and efficiency.