

COBRA

Items Supplied >

- 1 - Front Exhaust
- 1 - Rear Exhaust
- 1 - 3/4" Aluminum Spacer
- 3 - 1-3/4" Heat Shields

Application >

HONDA SHADOW 600 88-07


Instruction Manual >

1261

Page 1 of 1

PRIOR TO INSTALLATION, MAKE SURE YOUR STOCK GASKETS ARE IN GOOD SHAPE. IF YOU HAVE ANY DOUBTS AS TO THEIR CONDITION, REPLACE THEM.

1. Remove your stock exhaust.
2. Remove the lower stock mounting bar.
3. After stock mounting bar is removed, slide the supplied aluminum spacer over the frame stud.
4. Install the front exhaust first, then the rear exhaust. Use the stock flat washer and castle nut against the mounting brackets.
5. Check for proper fit and alignment then, finish tightening all nuts and bolts.
6. The supplied heat shields are to be positioned as per the drawing below. Be careful not to scratch your chrome during installation of these heat shields.

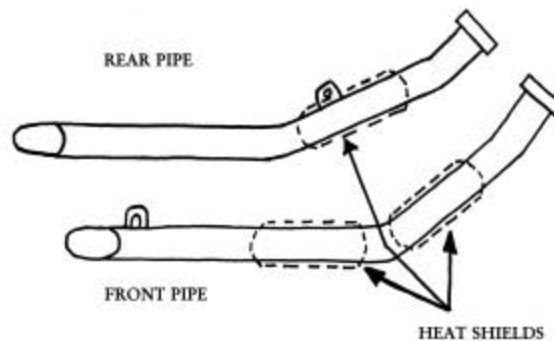

IMPORTANT: It is recommended that you re-jet your bike with a Cobra Jet Kit, available from Cobra part #92-1261.

Before starting your engine remove all fingerprints from chrome with a quality wax or chrome polish. Failure to do so can cause discoloration. Due to fluctuations in carburetor settings, timing, etc., Cobra Engineering does not warrant against chrome discoloration.

* *Cobra recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.*

Anything's Possible.