

COBRA

Items Supplied >

- 1 - Front Exhaust
- 1 - Rear Exhaust
- 1 - 6mm x 20mm Hex Bolt
- 1 - 1/4" Flat Washer
- 1 - 8mm Nut
- 3 - 2" Heat Shields

Application >

HONDA VT1100 SHADOW 87-96


Instruction Manual >

1266

Page 1 of 1

PRIOR TO INSTALLATION, MAKE SURE YOUR STOCK GASKETS ARE IN GOOD SHAPE. IF YOU HAVE ANY DOUBTS AS TO THEIR CONDITION, REPLACE THEM.

1. Remove your stock exhaust system and bottom mounting bar.
2. Install front and rear Boulevard Exhaust using supplied hardware and finger tighten all nuts and bolts.
3. Check the exhaust for proper fit and alignment and tighten all the nuts and bolts.
4. The supplied heat shields are to be positioned as per the drawing below. Be careful not to scratch your chrome during installation of these heat shields.

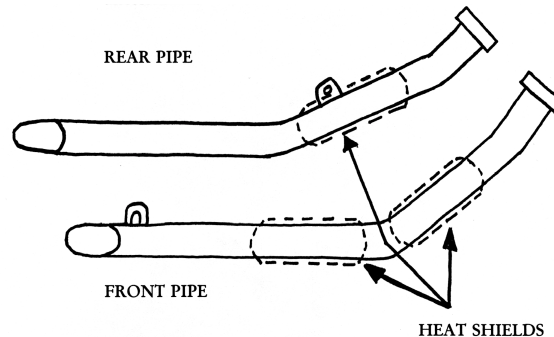

IMPORTANT: It is recommended that you re-jet your bike with a Cobra Jet Kit, available from Cobra part #92-1265.

Before starting your engine remove all fingerprints from chrome with a quality wax or chrome polish. Failure to do so can cause discoloration. Due to fluctuations in carburetor settings, timing, etc., Cobra Engineering does not warrant against chrome discoloration.

* *Cobra recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.*

Anything's Possible.