

# COBRA

## Items Supplied >

- 1 - Black Mounting Bracket with hardware
- 2 - 8mm Nuts
- 3 - 2" Heat Shields

## Tools Required >

HONDA SPIRIT 1100 97-07


## Instruction Manual >

1270

Page 1 of 1

**PRIOR TO INSTALLATION, MAKE SURE YOUR STOCK GASKETS ARE IN GOOD SHAPE. IF YOU HAVE ANY DOUBTS AS TO THEIR CONDITION, REPLACE THEM.**

1. Remove stock exhaust system.
2. Install supplied mounting bracket to stock exhaust mounting tabs. ( Note: Bracket arm should face toward rear of motorcycle.) **DO NOT TIGHTEN.**
3. Install rear Boulevard Muffler first. If head pipe alignment in cylinder is a problem rotate supplied muffler flange 180° for better fit.
4. Install front Boulevard Muffler. Muffler bolts through forward mounting hole on supplied bracket.
5. Tighten mounting bracket then, tighten exhaust bracket. Check for proper fit and alignment.
6. The supplied heat shields are to be positioned as per the drawing below. Be careful not to scratch your chrome during installation of these heat shields.

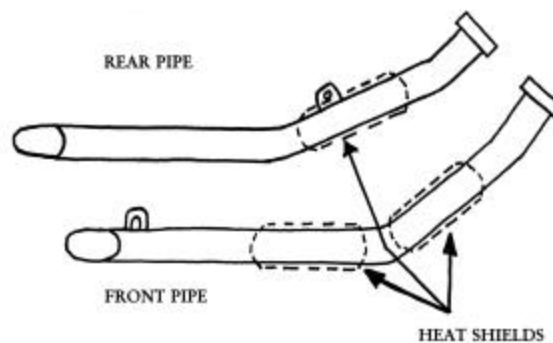

**IMPORTANT:** It is recommended that you re-jet your bike with a Cobra Jet Kit, available from Cobra part #92-1270.

Before starting your engine remove all fingerprints from chrome with a quality wax or chrome polish. Failure to do so can cause discoloration. Due to fluctuations in carburetor settings, timing, etc., Cobra Engineering does not warrant against chrome discoloration.

\* *Cobra recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.*

**Anything's Possible.**