

COBRA

Items Supplied >

- 1 - Front Exhaust
- 1 - Rear Exhaust
- 3 - 2" Heat Shields
- 1 - Aluminum Spacer

Application >

HONDA SHADOW 600 88-07


Instruction Manual >

1461

Page 1 of 1

PRIOR TO INSTALLATION, MAKE SURE YOUR STOCK GASKETS ARE IN GOOD SHAPE. IF YOU HAVE ANY DOUBTS AS TO THEIR CONDITION, REPLACE THEM.

1. Remove stock exhaust system and lower mounting bar.
2. Slide provided aluminum spacer over frame stud.
3. Install rear exhaust first then, front exhaust. Use stock flat washer and castle nut against mounting brackets.
4. Check for proper fit and alignment then, tighten all bolts.
5. The supplied heat shields are to be positioned as per the drawing below. Be careful not to scratch your chrome during installation of these heat shields.

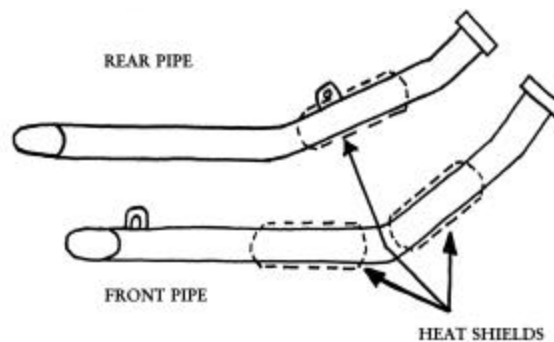

IMPORTANT: It is recommended that you re-jet your bike with a Cobra Jet Kit, available from Cobra part #92-1261 for 1988-1998 models and part #92-1262 for 1999-2002 models.

Before starting your engine remove all fingerprints from chrome with a quality wax or chrome polish. Failure to do so can cause discoloration. Due to fluctuations in carburetor settings, timing, etc., Cobra Engineering does not warrant against chrome discoloration.

* *Cobra recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.*

Anything's Possible.