<u>COBRA</u>

Items Supplied >

- 1 Sissy Bar w/ Pad
- 2 Mount Brackets (Left/Right)
- 2 Detachable Side Plates (Left/Right)
- 2 Front Mounting Bushings
- 2 3/8"-16 x 1-3/4" Buttonhead Bolts
- 2 3/8"-16 x 1" Buttonhead Bolts
- 4 M8 x 16mm Buttonhead Bolts


Application(s) >

HARLEY:					
FLSTF FATBOY	07-17				
FXST STANDARD	06-09				
FXSTS SPRINGER	06-09				
FXSTB NIGHT TRAIN	06-09				

Ins	struction Manual >		602-2022/602-2022B	Page 1 of 3	
 Read all instructions carefully before installing your new Cobra® product! 1. Remove the front bolt from the right side fender rail and discard. NOTE: Remove one side only so the fender does not fall resulting in possible scratches or damage to the fender or paint. See FIGURE 1. 2. Install the front mounting bushing into the front hole using the supplied 3/8"-16 x 1-3/4" long buttonhead bolt and tighten bolt securely. See FIGURE 2. 3. Remove the rear most fender rail bolt and discard. See FIGURE 1. 4. Install the right rear mount bracket into the rear hole using the supplied 3/8"-16 x 1" long buttonhead bolt and tighten bolt securely. See FIGURE 2. 					
		FIG	GURE 1		
CONTINUED ON PAGE 2					
* Cobra® recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.					



COBRA

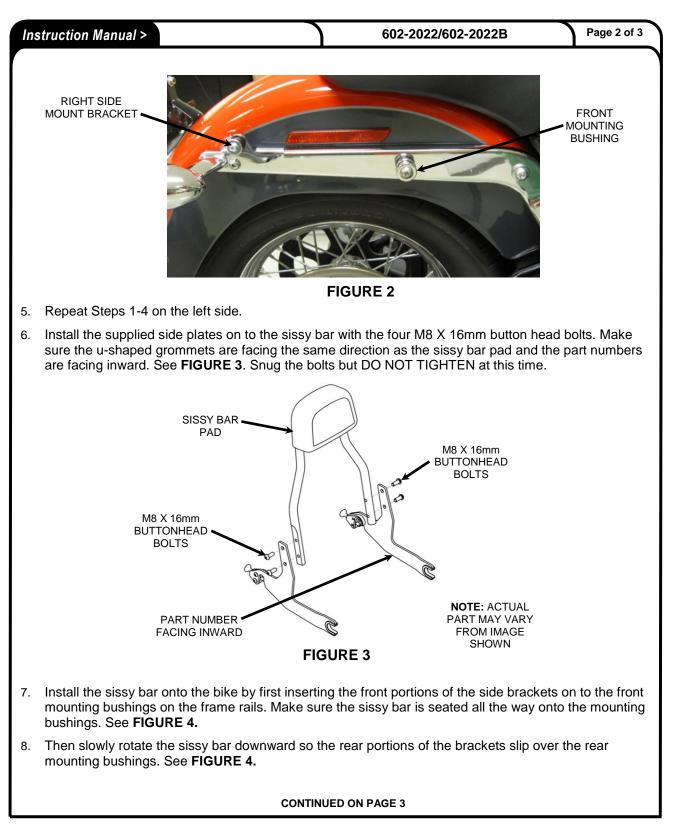



<u>COBRA</u>

