

**"BRIDGE THE GAP" HEAT SHIELD 9196**

**FITS: '93-UP DRESSER AND ROAD KING MODELS WITH STOCK FRONT HEAD PIPE AND HEAT SHIELDS**

PART#	INCLUDED
409196	1 Bridge the Gap Head Shield – Chrome
309196	1 Installation Instruction

**THANK YOU FOR CHOOSING KURYAKYN!**

**TOOLS SUGGESTED**

Flat Head Screwdriver

**PROCEDURE**

**STEP 1** Loosen the two clamps on the front heat shield, labeled as "A" in PIC.1, as much as possible without the clamps coming undone.


**STEP 2** Loosen the two clamps on the middle head shield, labeled as "B" in PIC.1, until the end of the clamp comes free from the threaded tightening mechanism. Remove the middle heat shield entirely if you prefer, but it is not necessary. Rotate the middle heat shield down and slide it towards the rear of the bike to gain the clearance needed to install the "Bridge the Gap" Heat Shield. See PIC.2.

**STEP 3** Insert the longer end of the "Bridge the Gap" Heat Shield under the lower end of the front heat shield. Make sure the end comes to rest under the lower clamp of the front heat shield.


**STEP 4** Maneuver the rear end of the "Bridge the Gap" Heat Shield into position under the middle heat shield's forward most clamp.

**STEP 5** Move the middle heat shield back into position and tighten the clamps just enough to hold it in place.

**STEP 6** Line up all the heat shields so the seams are as inconspicuous as possible. Start by lining up the middle heat shield with the rear heat shield and work forward. When you have the shields in the preferred position, tightening each fully. See PIC.3.

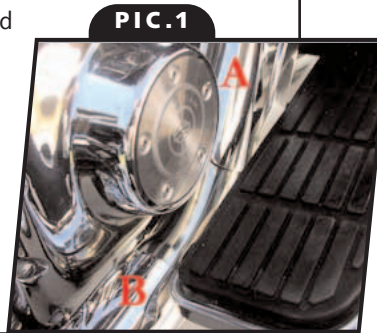

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn™ product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

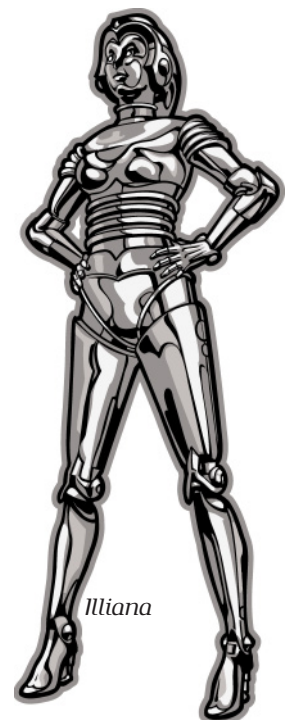

*Ride On!*