



# TWISTED THROTTLE

*Bolt-On Touring Accessories that fit YOUR motorcycle!*

## Accessory Mounting Bracket for SW-Motech & Givi Sidecarriers

PEL.00.1120

- Fits most cases smaller than 10" wide by 7" tall
- Allows use of quick release luggage

### PLEASE READ BEFORE INSTALLING

TWISTED THROTTLE products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. TWISTED THROTTLE takes no responsibility for damages caused by improper installation.

Medium strength liquid thread-locker (i.e., "Locktite") should be used to secure all screws, bolts, and nuts.

All screws, bolts, and nuts should be checked after driving the first 30 miles (50 km) to ensure that all are tightened to the proper torque.

All screws, bolts, and nuts, including all replacement hardware provided by TWISTED THROTTLE should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:





M5.....	3.5 ft-lbs (5 Nm)
M6.....	6.5 ft-lbs (9 Nm)
M8.....	16 ft-lbs (22 Nm)
M10.....	32 ft-lbs (43 Nm)
M12.....	55 ft-lbs (75 Nm)






# Installation Instructions




Step 1

<b>1</b> <b>Bracket</b>  KFT.00.001 Qty.....1	<b>2</b> <b>Lens Head Screw</b>  M6x30.....ISO 7380 Qty.....2	<b>3</b> <b>Countersunk Screw</b>  M6x40.....DIN 7991 Qty.....2	<b>4</b> <b>Nyloc Nut</b>  M6.....DIN 985 Qty.....4
--	--	--	--

Step 2

<b>5</b> <b>Lens Head Screw</b>  M6x20.....ISO 7380 Qty.....2	<b>6</b> <b>Sealing Washer</b>  M6 Qty.....2	<b>7</b> <b>Spacer</b>  #AS62-14-8 Qty.....2
--	---	---

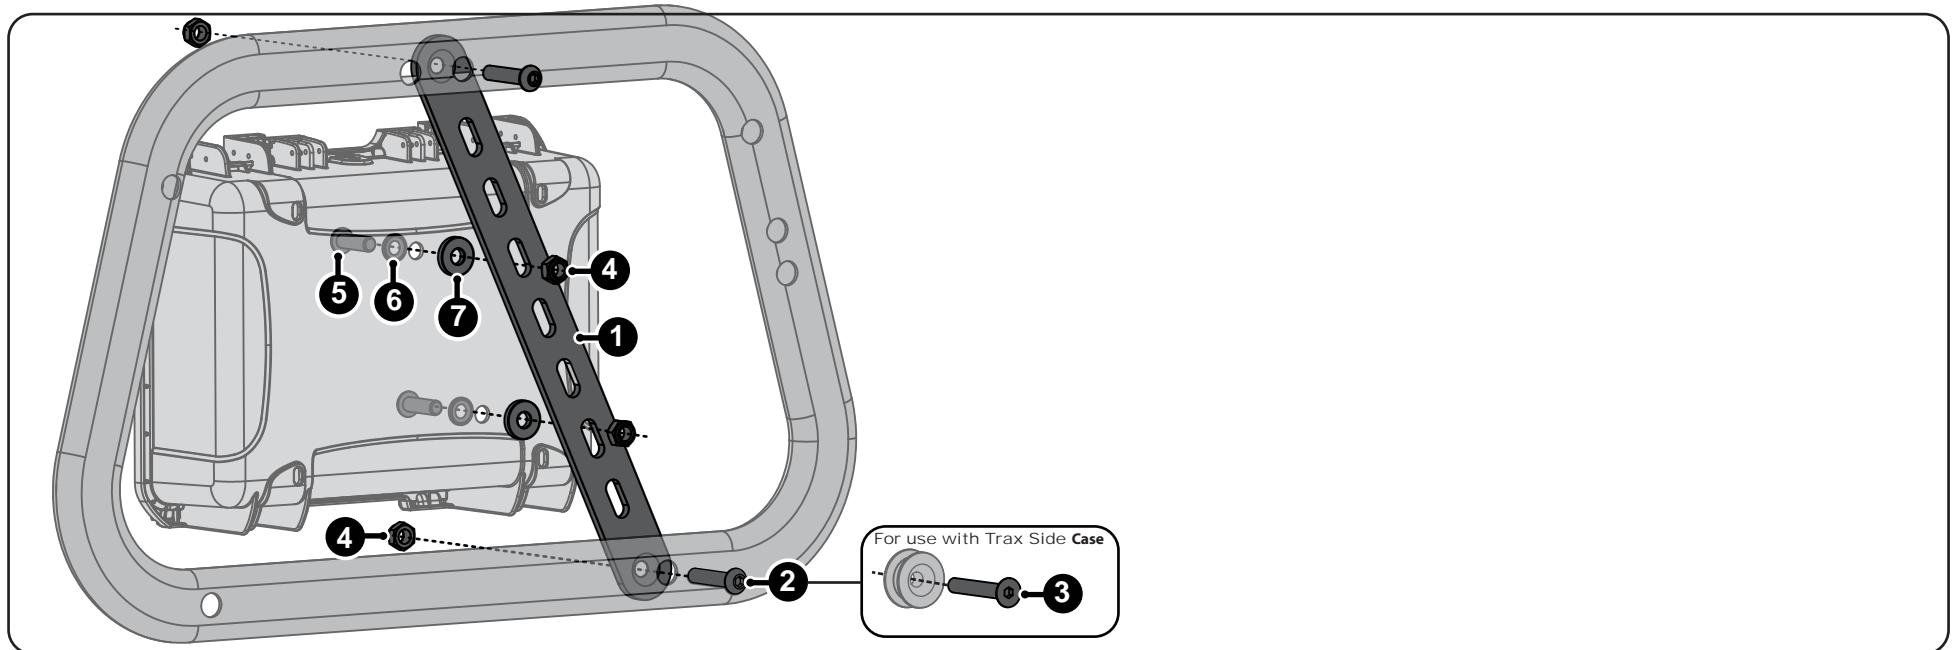

Step One: Bolt the mounting bracket to the rack using the included hardware. See diagram for installing with Trax Side cases.

Step Two: Place the case against the bracket and mark the hole pattern on the case. Using a 6mm drill bit, drill through the back side of the case. Using the included hardware, bolt the case to the rack.