

EE Radiator Brace Mounting Instructions



FIG 1



FIG 2



FIG 3



FIG 4



FIG 5

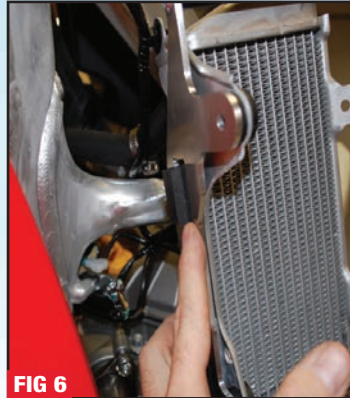


FIG 6



FIG 7

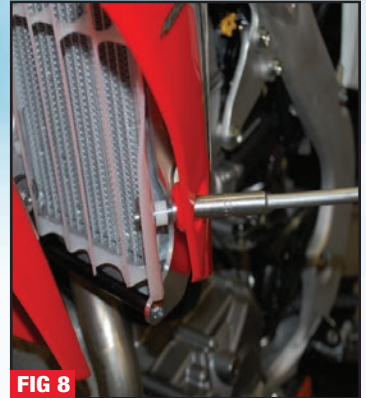


FIG 8

- 1 Drain the Radiator coolant using an 8mm T- Handle or socket to remove the coolant drain plug (Fig 1)
- 2 Remove the seat and the 3 bolts that hold each of the Radiator shrouds in place and remove shrouds.
- 3 Remove the top tank mount and the rubber strap at the rear of the tank. You will not need to disconnect the fuel line or wires going to the tank. Just move tank out of the way (Fig 2)
- 4 Remove the white plastic louvers from the front of the radiators.
- 5 Loosen all of the hose clamps that hold the radiator hoses to the radiators.
- 6 Using an 8mm T-handle or socket remove the 2 bolts that hold each radiator to the frame. The left side radiator has a wiring harness connected to the top of it, you do not need to disconnect it from the radiator. (Fig 3)
- 7 Prepare the radiator braces for installation, install the support rods to the large or inside brace half. Install the left side radiator brace first; it is marked with an "L". Install the supplied 6x16mm button head bolts through the brace and into the support rod, tighten the bolts using a 4mm T-handle or Allen wrench. (Fig 4)
- 8 Place the large half of the radiator brace on the inside of the radiator, the brace will have cut outs for the rubber blocks on the radiator to come through. (Fig 5&6) It may be necessary to move the rubber blocks in order to get the braces to line up with the radiator mounting holes. Using the supplied 6x30mm hex head bolts and 6mm washer install the radiator and brace to the frame. (Fig 7)
- 9 Using the supplied 6x16mm button head bolts, install the small half of the radiator brace to the support rods on the outside of the radiator and the 6x8mm button head bolts to the large half of the radiator brace on the back side of the radiator.
- 10 Install the white plastic radiator louvers to the front of the radiators.
- 11 Tighten all of the hose clamps that hold the radiator hoses to the radiators.
- 12 Repeat steps 4-10 for right side.

- 13 Install gas tank and radiator shrouds to the gas tank. With the supplied 6x25mm hex head bolts and nylon spacer attach the radiator shrouds to the radiators by placing the nylon spacer between the radiator and radiator shroud. (Fig 8)
- 14 Install seat.
- 15 Fill the radiators with coolant.

WARNING AND DISCLAIMER

All parts manufactured, designed or sold by Enduro Engineering, Inc. (EEI) are to be installed by a licensed motorcycle dealer or a licensed motorcycle technician. Motorcycles can be dangerous. Serious injury, death and property damage can result from the use of motorcycles. This risk is increased by improper installation or misuse of after market parts. EEI's customers must exercise good judgment in the use, control, alteration, part selection and installation, and maintenance of their motorcycles. In the event of a possible defect in material or design, or any other defect in a part manufactured, designed or sold by EEI, the responsibility of EEI is limited to either a refund of the purchase price or the replacement of the part if EEI determines the part to be defective, and subject to EEI's inspection of the part within thirty (30) days from the date of purchase. (Note: any attempted repairs or modifications made to EEI products will void this limited warranty). EEI, under no circumstances will be responsible for incidental and/or consequential damages, property damage, personal injury damage, or damage, injury, cost or expense of any kind or nature whatsoever. By purchasing an EEI product or a product sold by EEI, you (1) acknowledge the above disclaimer and agree to its terms; (2) agree that any claim brought against EEI arising from and/or pertaining to or otherwise related to a part manufactured, designed or sold by EEI must be brought in the Michigan State Courts located in the County of Ingham or in the Federal District Court for the Western District of Michigan and that Michigan law shall apply on all issues; and (3) any claim against EEI must be brought within one (1) year of purchase of the product. EEI makes no other warranty, express or implied, including without limitation any warranties of merchantability and fitness for a particular purpose.



QUALITY OFF-ROAD MOTORCYCLE PRODUCTS

INSTRUCTIONS

Radiator Brace
Mounting Instructions
Part# 11-167, 11-169