Radiator Brace Instructions-Kawasaki



¹ Using a 10mm T-handle or socket, remove the seat (fig. 1).

² Using an 8mm T-handle or socket, remove the radiator shrouds.

³ Remove the plastic radiator louver (fig. 2).

4 Remove the two bolts attaching the radiator to the frame (fig. 3).

⁵ Position the radiator brace labeled 11-186 R/L1 (right or left side) between the frame and the radiator as shown (**fig. 4**).

5a NOTE: you will need to rotate the radiator to get clearance to slide these parts into place.

6 Using the provided M6x16mm button head bolts secure two support rods as shown (**fig. 5**).


7 Using the provided M6x30mm hex head bolts along with the 22mm washers; attach the radiator and inner brace to the frame (**fig. 6**).

⁸ Attach the radiator brace piece labeled 11-186 R/L2 to the 11-186 R/L1 piece installed in the previous step.

WARNING AND DISCLAIMER

All parts manufactured, designed or sold by Enduro Engineering, Inc. (EEI) are to be installed by a licensed motorcycle dealer or a licensed motorcycle technician. Motorcycles can be dangerous. Serious injury, death and property damage can result from the use of motorcycles. This risk is increased by improper installation or misuse of after market parts. EEI's customers must exercise good judgment in the use, control, alteration, part selection and installation, and maintenance of their motorcycles. In the event of a possible defect in material or design, or any other defect in a part manufactured, designed or sold by EEI, the responsibility of EEI is limited to either a refund of the purchase price or the replacement of the part if EEI determines the part to be defective, and subject to EEI's inspection of the part within thirty (30) days from the date of purchase. (Note: any attempted repairs or modifications made to EEI products will void this limited warranty). EEI, under no circumstances will be responsible for incidental and/or consequential damages, property damage, personal injury damage, or damage, injury, cost or expense of any kind or nature whatsoever. By purchasing an EEI product or a product sold by EEI, you (1) acknowledge the above disclaimer and agree to its terms; (2) agree that any claim brought against EEI must be brought in the Michigan State Courts located in the County of Ingham or in the Federal District Court for the Western District of Michigan and that Michigan law shall apply on all issues; and (3) any claim against EEI must be brought within one (1) year of purchase of the product. EEI makes no other warranty, express or implied, including without limitation any warranties of merchantability and fitness for a particular purpose.



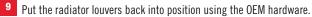

¹⁰ Put the radiator shrouds back on using all the OEM hardware EXCEPT for the center frame mount.

10a NOTE: On the center frame mount use the provided M6x25mm hex head bolt, washer and nylon spacer (spacer between the shroud and frame) (**fig. 9**).

11 Repeat steps 3-10 on the opposite side of the bike if not already done so.

11a NOTE: On the left side be sure to re-attach the clutch cable mounts between the radiator mounting bolt and the 22mm washer (**fig. 10**).

- 12 Put the seat back on.
- 13 Have fun and ride safe!

