

1. Use an 8mm wrench and/or socket to remove the two bolts holding on the OEM plastic skid plate. (fig. 1 and 1.1)
2. Using the provided 6x25mm hex head bolt, install the rear section of the skid plate to the rear mount on the frame do not tighten at this time. (fig 2)
3. Using the provided 6x25mm hex head bolt, install the front protection plate do not tighten at this time. (fig 3)
4. Install the provided front mounting bracket into position. Install between the frame rails and engine cases by sliding one end up between the engine case and frame with the longer side to the throttle side of the bike, then pulled back so that the bracket rests on both frame rails. (fig 4 and 4.1)
5. Position the EE skid plate up against the frame and the front protection plate of the skid plate. Using the two provided 8x45mm flat head bolts, fasten the plate to the front bracket, and do not tighten at this time. (fig. 5)
6. Starting from the rear of the bike to the front tighten all bolts, while pressing the plate up against the bike.
7. Have fun and ride safe!



FIG 1



FIG 1.1

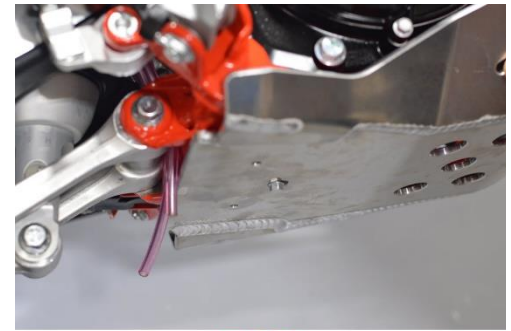


FIG 2



FIG 3



FIG 4



FIG 4.1



FIG 5

Add EE Linkage Guard Part Number: 31-4117

Part Number: 24-4020X
EXTREME SKID PLATE
Installation Instructions

Quality Off-Road Motorcycle Products

