

1. If you have an OEM Plastic skid plate installed. Remove the skid plate.
2. Install foam frame protector.
3. Hold the Aluminum Skid Plate up to the frame lining up the front mounting hole and the rear mounting hole.
4. Starting with the rear. Take the supplied 6x12 hex head bolt and start by hand in the rear mounting hole. (FIG 1)
5. Take the supplied 6x20 hex head bolt and start by hand in the front mounting hole.(FIG 2)
6. Using an 8mm T-Handle or Socket, Tighten the bolts you started by hand in steps 5 and 6.
7. Have fun and enjoy your next ride. (FIG 3)

Add EE Linkage Guard Part Number: 31-5017

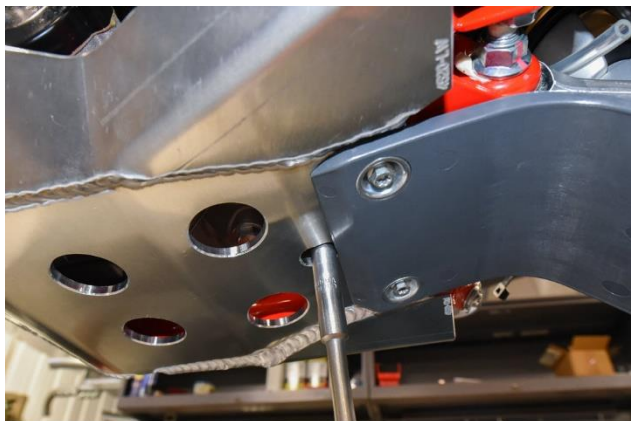


FIG 1

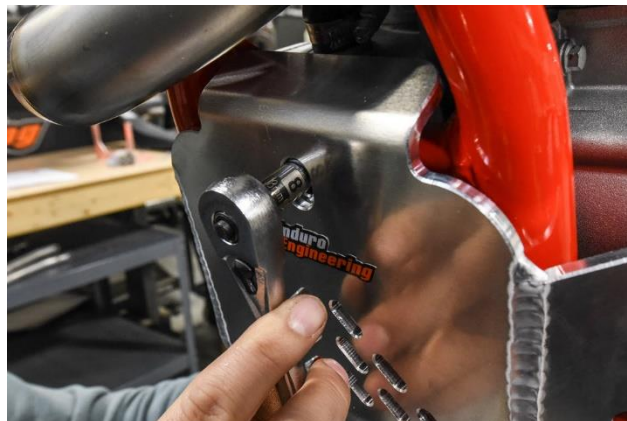


FIG 2

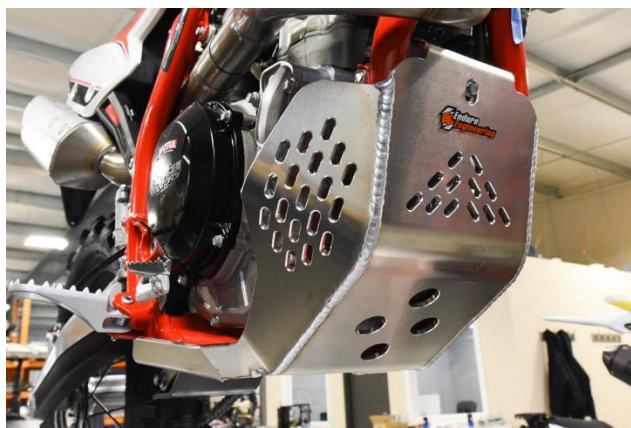


FIG 3

PART # 24-4220X

Skid Plate Installation Instructions

