

EE Installation Instructions

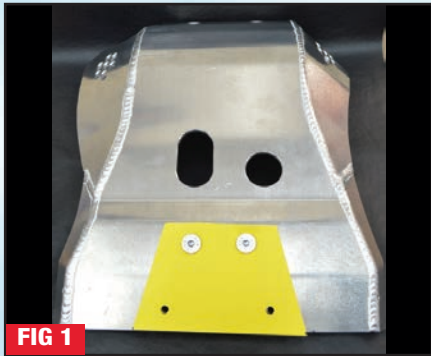


FIG 1



FIG 2



FIG 3




FIG 4a



FIG 4b

WARNING AND DISCLAIMER

All parts manufactured, designed or sold by Enduro Engineering, Inc. (EEI) are to be installed by a licensed motorcycle dealer or a licensed motorcycle technician. Motorcycles can be dangerous. Serious injury, death and property damage can result from the use of motorcycles. This risk is increased by improper installation or misuse of after market parts. EEI's customers must exercise good judgment in the use, control, alteration, part selection and installation, and maintenance of their motorcycles. In the event of a possible defect in material or design, or any other defect in a part manufactured, designed or sold by EEI, the responsibility of EEI is limited to either a refund of the purchase price or the replacement of the part if EEI determines the part to be defective, and subject to EEI's inspection of the part within thirty (30) days from the date of purchase. (Note: any attempted repairs or modifications made to EEI products will void this limited warranty). EEI, under no circumstances will be responsible for incidental and/or consequential damages, property damage, personal injury damage, or damage, injury, cost or expense of any kind or nature whatsoever. By purchasing an EEI product or a product sold by EEI, you (1) acknowledge the above disclaimer and agree to its terms; (2) agree that any claim brought against EEI arising from and/or pertaining to or otherwise related to a part manufactured, designed or sold by EEI must be brought in the Michigan State Courts located in the County of Ingham or in the Federal District Court for the Western District of Michigan and that Michigan law shall apply on all issues; and (3) any claim against EEI must be brought within one (1) year of purchase of the product. EEI makes no other warranty, express or implied, including without limitation any warranties of merchantability and fitness for a particular purpose. R.JRF.Sec.randt.warninganddisclaimer. 5 2 08

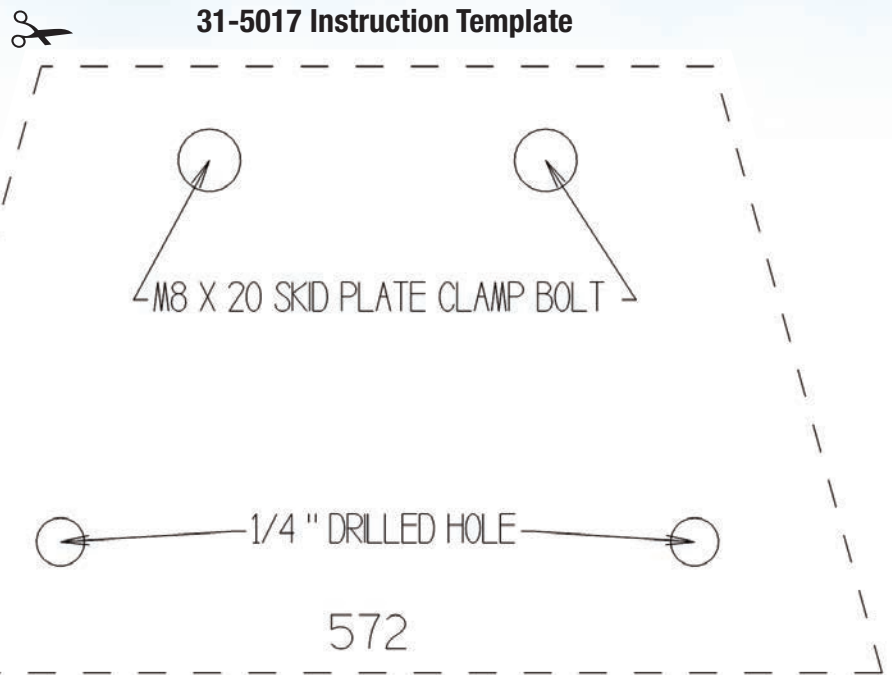

- 1 If the linkage guard is to be installed on a skid plate that is already installed on a bike, remove the skid plate from the bike.
- 2 If your skid plate doesn't already have the Linkage Guard mounting holes, use the supplied template, place on the skid plate as shown in (Fig.1). Use the two M8x20 flathead bolts to align the template.

NOTE: If your skid plate doesn't have the M8 holes as shown, align template with the back edge of skid plate and center.

- 3 Now mark the two holes that need to be drilled in the skid plate. (Fig.2)
- 4 Using the supplied 1/4" drill, drill the two marked holes. (Fig.3)
- 5 Mount the linkage guard using the supplied M6x12 hex head bolts, dished washers and the M6 Nylock nut shown in (Fig.4a & b)

Enduro Engineering

QUALITY OFF-ROAD MOTORCYCLE PRODUCTS

INSTRUCTIONS

EE Installation

Part# 31-5017