

## Instructions – PMB-01-3008

Thank you for your purchase! We are confident that you will be pleased with the quality of our product.

### Parts List:

- 1-Kickstand
- 2-10x20 BH
- 2-M10 Washers

**NOTE:** We recommend using a thread-locking agent on all bolt threads.

### To install your new kickstand:

1. Remove the bolt attaching the stock kickstand. Slide the kickstand off the frame. Detach and remove the kickstand spring.
2. Remove the two kickstand stop bolts located above and below the stock kickstand (Figure 1). If the bolts are difficult to remove, use a heat gun to help break up the thread locking agent.
3. Slide the kickstand onto the frame and secure with the two 10x20 button head bolts (Figure 2). The two bolts provided replace the bolts removed in step two. The included washers can be used to shim the kickstand from the bike if needed for better fitment.
4. Periodically check all mounting bolts for tightness.

### To prevent damage:

- Clean and lubricate the kickstand pivot area after each ride! We recommend using a penetrating lube, such as WD-40. If necessary, you can remove the back cover plate for additional cleaning.
- Carefully position kickstand up and down.
- Do not start/sit on bike with the kickstand down.

Figure 1

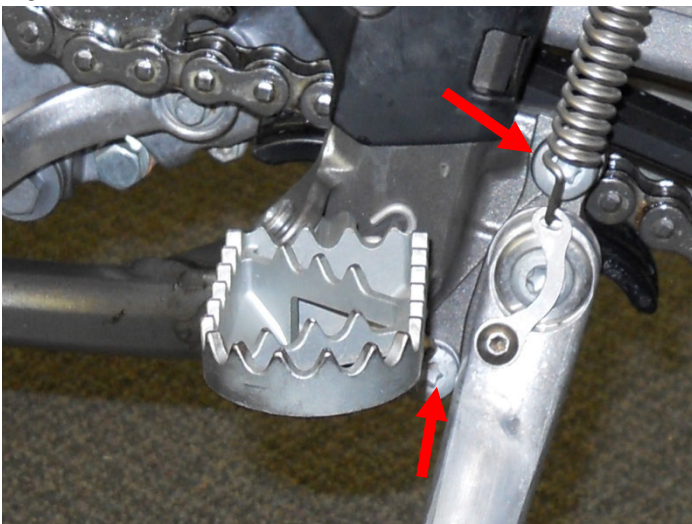


Figure 2

