

INSTALLATION PROCESS:  
**FK003D494R Rear Brake Line Kit**  
2003-10 Yamaha XVZ1300 Royal Star Venture



**Step 1:**

Identify the key components that complete our brake line kit:

You should have one (1) line, one (1) single banjo bolt, and one (1) adapter. We have also included a total of five (5) washers; three (3) will be used, and two (2) will be spares. We strongly suggest having a professional mechanic install your brake lines, all other installs may void your warranty.

**Step 2:**

To ensure there is no paint damage from the brake fluid, completely cover the rear end of the bike. Installing brake lines can be a messy process, and brake fluid *WILL* spill!

**Step 3:**

After bleeding and drying out the OEM brake system, uninstall your rear stock hose. Take note of how the stock system was routed in case you need to re-install the hose.

**Step 4:**

Install the Galfer provided adapter to the rear master cylinder using one (1) washer, and torque down to 12 – 13 ft pounds. Identify which end of the new Galfer brake line to install at the master cylinder. Install this end to the adapter and torque down to 6 ½ ft pounds.

**Step 5:**

Route the line to the rear caliper, following the OEM routing. Install the line to the caliper using a single banjo bolt and two (2) washers, the sequence will be as follows; caliper, washer, banjo fitting, washer, single banjo bolt. Stainless steel fittings torque down to 15 – 17 ft pounds.

**Step 6:**

Before you begin the next step, please check the clearance of your new lines. When the rear end is fully extended or compressed, make sure the lines do not bind with anything. Be sure to triple check that the lines are traveling correctly and are clear from any obstructions.


**Step 7:**

Bleed your brake system according to the owner's manual. Add Galfer DOT-4 brake fluid to the system and build appropriate pressure.

**Step 8:**

Once you have bled the system, please check the brake fluid level in your master cylinder. Top off your brake fluid according to your manual and close the brake fluid reservoir. To ensure there are no leaks or other issues, use a jug or something similar to apply pressure to your brake pedal for at least 2 hours. If the lines are not leaking and all else looks good, (bolts are tight and torqued down to specification, washers are in place, and lines are clear from obstruction) you are now ready to ride with the new brake system.

Please be aware that the overall braking feel has been changed dramatically. We suggest taking it easy while you get used to the new brake lever pressure and feel. We recommend checking your brake system periodically; be sure to check that your bolts are tight and *VERY* carefully check your lines for any leaks or damage. If there are any signs of damage or stress to the lines, the complete brake line kit will need to be replaced.

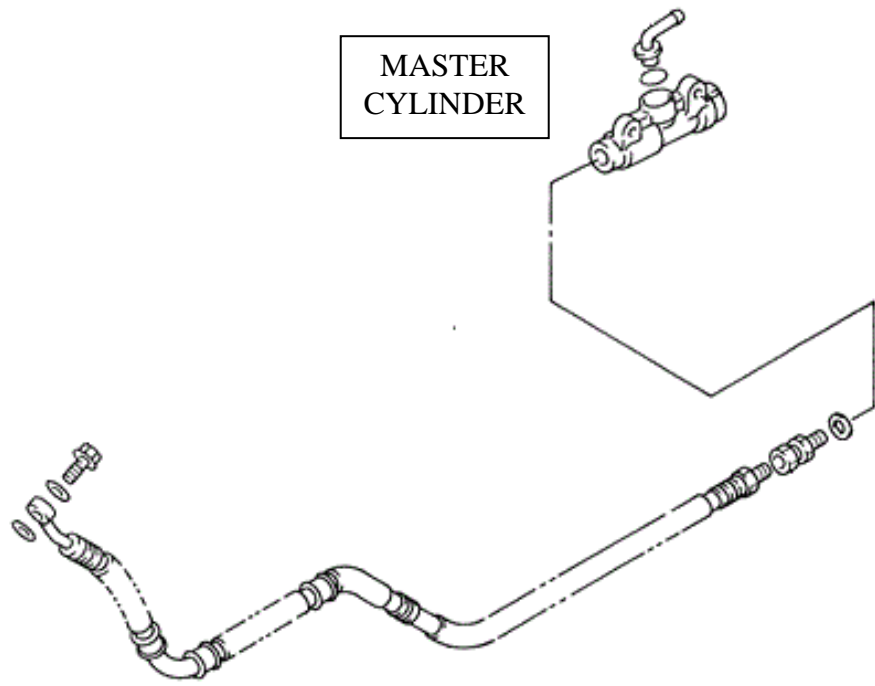

When it comes to quality motorcycle brake parts, Galfer is the brand you can depend on.