



EGY-17FZ10-C

Carbon Fiber Engine Guard Set Yamaha FZ10 2017

PARTS LIST

Left Side Carbon Guard	1	6m Nut	4
Right Side Carbon Guard	1	6m Nyloc Nut . Black	4
6 x 50m Set Screw	2	6m Washer	4
6 x 40m Set Screw	2		

<<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>>

Right Side Guard Installation

- 1) Remove only the two 10mm 12 point head bolts marked red in **Photo 1**.



Photo 1

- 2) Install the two 40mm long set screws until they bottom out then stop. Install 1 washer, sharp edge facing out, onto each set screw. Install 1 standard silver nut onto each set screw tightening to 7 lb-ft / 9.49 Nm.
- 3) Slide the right side carbon guard over the 2 set screws using the palm of your hand to lightly tap it on until it has bottomed out against the ignition cover. Use the 2 black nyloc nuts to secure the carbon guard using very little torque. Make sure the nylon of the lock nut is engaged on the set screw. To prevent the carbon guard from cracking, make sure not to over tighten the nyloc nuts.

Left Side Guard Installation

- 1) For the left side stator cover, unlock the 2 bodywork fasteners by the stator cover to gain access for installation of the carbon guard. **Photo 2**.
- 2) Remove only the two 10mm 12 point head screws marked red in **Photo 2**.

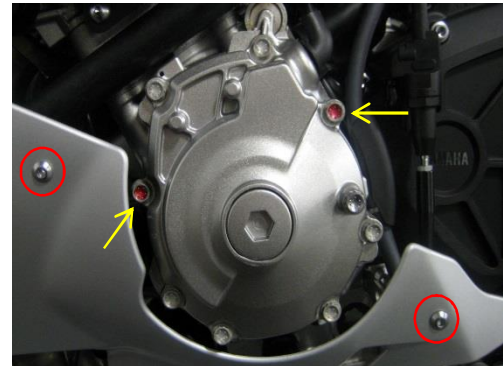


Photo 2

- 3) Using the 50m set screws, repeat steps 2 and 3 from the right side carbon guard installation.
- 4) Reinstall the 2 bodywork fasteners. Wipe off all fingerprints before starting your R1.
- 5) After you have gone on your first ride with your new Carbon Guards recheck the black nyloc nuts on each side cover.

The purchaser releases Graves Motorsports, Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident. **This product is intended for Closed Course Competition Use Only** and may render the vehicle illegal for use on public roads.