



## EXB-16S1RR-CBTC


## BMW Carbon Fiber Cat Back Exhaust 2015 - 2016 BMW S 1000 RR

### Parts List

- |                      |   |                    |   |
|----------------------|---|--------------------|---|
| • Slip-On            | 1 | • M8 Fender Washer | 1 |
| • Clamp 60mm         | 1 | • M8 Nyloc Nut     | 1 |
| • M8 x 35 Allen Bolt | 1 |                    |   |

<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>


- 1) Remove the stock muffler by removing the stock T45 Torx bolt. **(photo 1)**

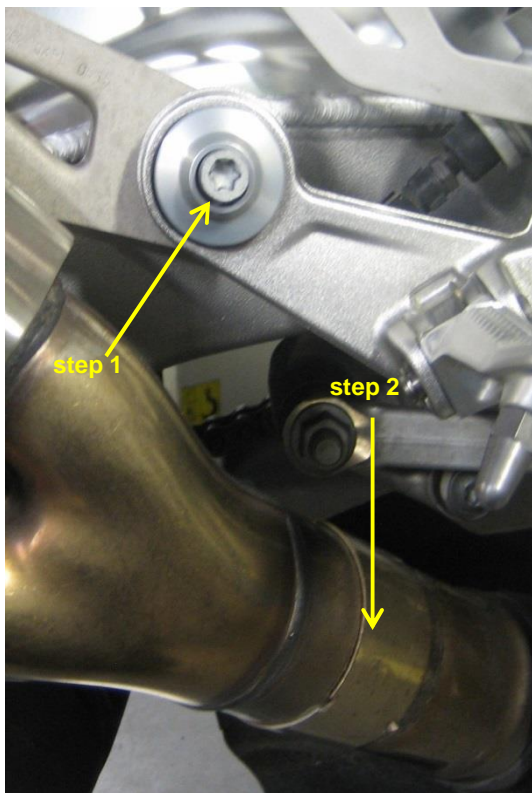

**Photo 1**

- 2) Loosen the exhaust clamp at the base of the muffler then slide the muffler off. **(photo 1)**

- 3) Install the Graves slip-on onto the stock exhaust. Align the mount on the Graves slip-on to the *outside* of the mount on the foot peg rest **(photo 2)**. *Leave the clamp loose for now.*

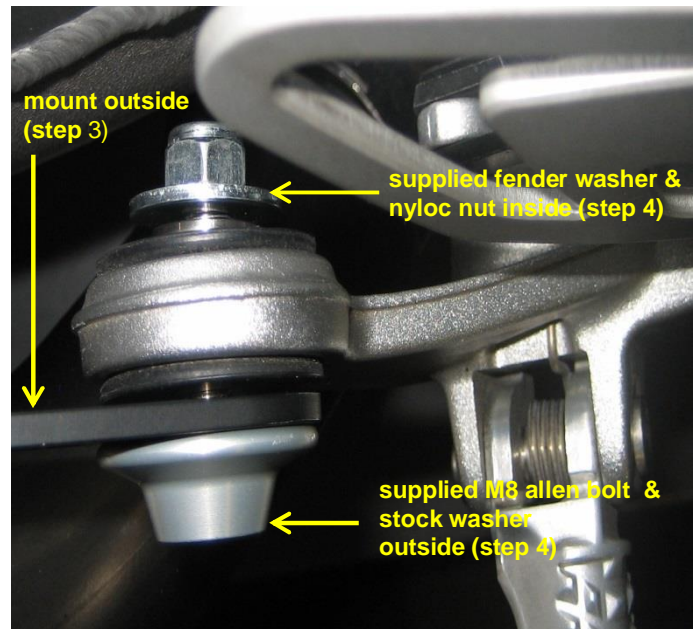

**Photo 2**

- 4) Use the supplied 8mm allen bolt and the stock washer on the outside. Then use the supplied fender washer and nyloc nut on the inside of the foot rest mount. Torque the allen bolt to 22-24 Nm. **(photo 2)**
- 5) Tighten the clamp below.
- 6) Before starting your motorcycle, be sure to clean any finger prints or dirt from your exhaust.

The purchaser releases Graves Motorsports, Inc from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident. **This product is intended for Closed Course Competition Use Only** and may render the vehicle illegal for use on public roads.