


Instruction manual HIGHSIDER handlebar end
„CURVE“ and „DOT“

HIGHSIDER™

POWERED BY PAASCHBURG & WUNDERLICH

Thank you for buying a HIGHSIDER product. Because of our passion for motorcycles all our products are designed to meet your needs as a motorcyclist. We wish you always a safe and pleasant ride with your new HIGHSIDER product from Paaschburg & Wunderlich GmbH.

Before installing the bar end read this manual carefully.
For installation you need to assemble the parts according to the sketches below. Assembling depends on the inner diameter of your handlebar.

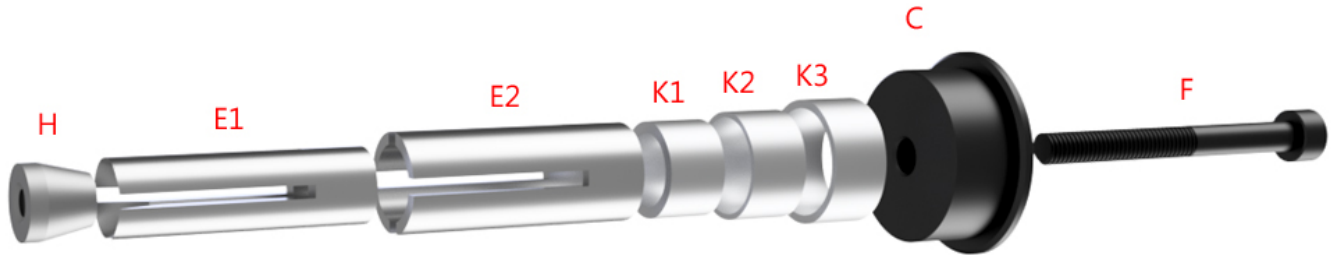

- 1) Make sure that your motorcycle stands solidly on ground.
- 2) Clean the inside of your handlebar with some alcohol.
- 3) Assemble according to the following sketches!

Inner diameter handlebar max. 13,9mm	Inner diameter handlebar max. 15,9mm	Inner diameter handlebar max. 17,9mm	Inner diameter handlebar max. 20,9mm	Inner diameter handlebar > 21mm

- 4) Use the nut H to spread clamp E until it fits to inner diameter of your handlebar.
The clamps E may not turn inside the handlebar when screw F is tightened (next step)!
- 5) Position the assembly inside the handlebar and turn screw F tight (max 9 Nm).
OBSERVE: Make sure that barend C does not touch the throttle tube. A jammed throttle tube compromises safety and may result in accident.