


**Flexpower™ In-Fairing CB
Antenna for 2014-18
Harley® Ultra or StreetGlide
with Factory Harley CB Radio**

#FPA-HCCB-14

**Installation
and
Instructions**

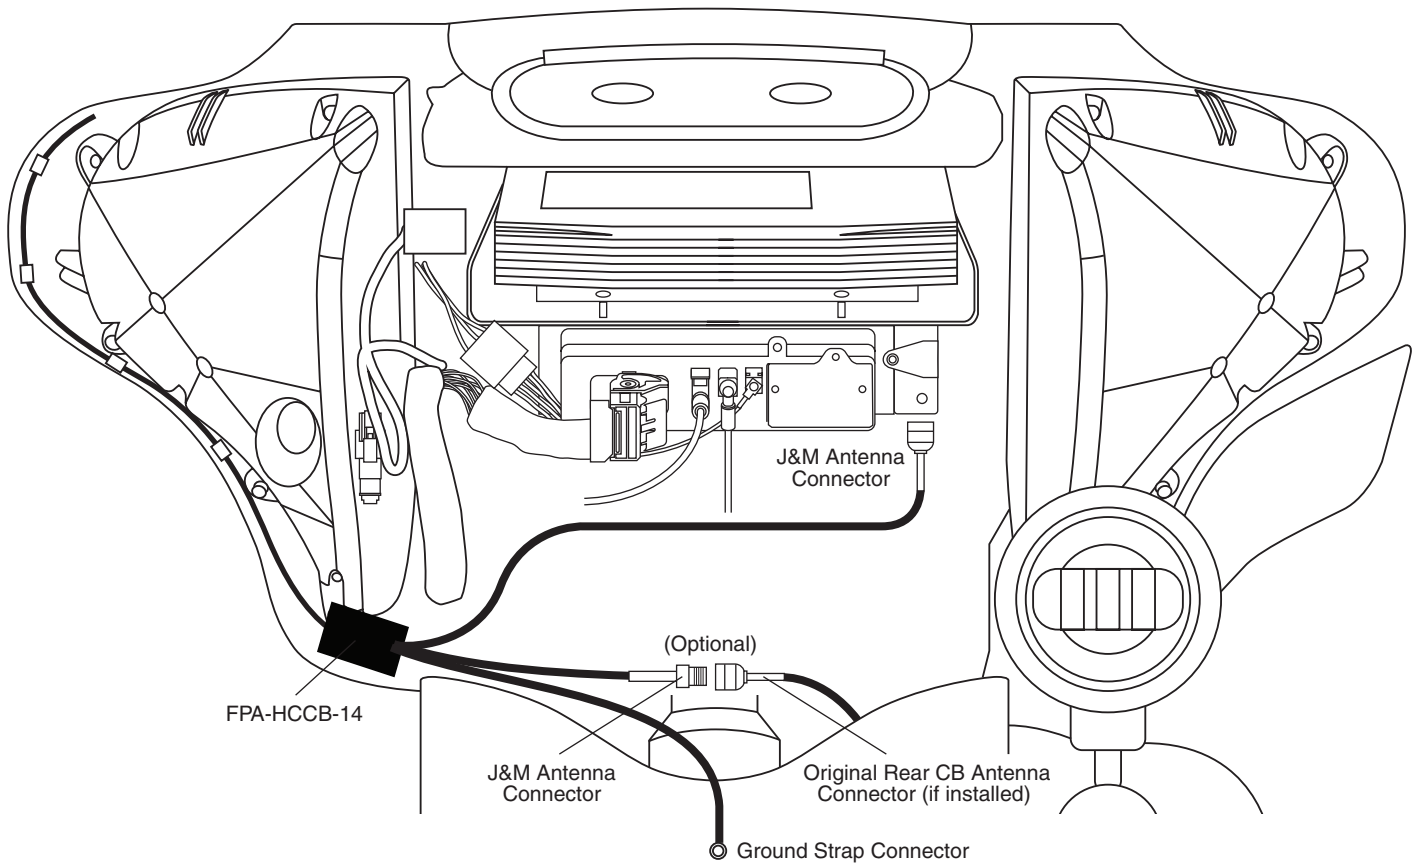

Classic (Bat Wing) Fairing

Installation and Instructions

1. Remove the windshield and outer fairing shell.
2. Mount the J&M FPA-HCCB-14 antenna module at the bottom of the the right side inner fairing speaker enclosure, using the two-sided tape already affixed to the module. **(See Diagram)**
3. Route the antenna lead-wire upward along the right edge of the inner fairing and into the upper right hand corner of the inner fairing. For optimum performance, secure the antenna lead-wire as close to the edge of the inner fairing as possible using the provided adhesive clips. **(See Diagram)**
4. Disconnect your stock CB antenna cable from the CB radio module and connect the antenna cable from the FLEXPOWER antenna to the CB radio module in its place. Note: If you wish to retain full function of the original rear antenna assembly, when the tail trunk is attached, you may simply connect it to the additional female connector from the J&M FPA-HCCB-14 unit. **(See Diagram)**
5. Route the ground strap from the J&M FPA-HCCB-14 module alongside the factory wiring harness and behind the fork assembly. Attach the terminal to the upper crash-guard mounting bolt. Secure the ground strap to the factory harness using the provided tie-straps. **(See Diagram)**
6. Replace the outer fairing and windshield.

Thank you for the confidence you have shown in J&M Corporation by purchasing one of our innovative products.

