

**ROKKER® XXR Series 5X7”
Saddlebag Speaker Upgrade
Kit for 2006-2019 Harley
StreetGlide/Ultra**

#HDRK-5X7TW-XXR

**Installation
Instructions**

Product Overview



J&M's ROKKER XXR series 5X7" speakers are designed as exact size component/replacements for the stock 5X7" Harley saddlebag-lid speakers as installed on the 2006-2019 Harley Baggers.

Spec'd at 2 ohms impedance and 300 watts maximum input (175w RMS - 91db sensitivity), these speakers provide the ultimate in raw audio power and include the bridge-mounted high-output tweeter.

Lightweight waterproof one-piece woven-fiber driver cone with super-rigid metal basket design.

High-density lite-weight Neodymium magnet structure, specially coated to maintain flux-strength integrity even at extreme operating temperatures.

High efficiency VENTED voice-coil for improved cooling when operating at high volume levels for extended periods.

Custom bridge-mounted high-output tweeter.

These are THE most powerful 5X7" speakers you can buy for your Harley and they will perform extremely well when used with a medium to high-powered accessory amplifier.

Installation into 2014-2017 Harley Saddlebag Lids

1. Turn saddlebag lid upside down and remove the 4 screws securing the grill to the lid and remove the grill.



2. From the top of the saddlebag lid, remove the 4 screws securing the speaker and as you remove the stock Harley speaker from the lid, unplug the wire connection at the bottom of the speaker.



3. Set the new 'J&M ROKKER XXR 5X7" speaker down into the basket and mark the position over the very center of the magnet. Using a 3" hole saw, drill a 3" hole into the bottom of the speaker shield basket using this magnet center location for the hole- saw pilot bit. (This 3" hole is to allow the 5X7" ROKKER XXR speaker magnet to breathe and cool the voice coil under high load or volume levels)



4. Position the speaker down into the lid to determine if the 3" hole needs to be enlarged slightly in any direction, to completely clear the ROKKER XXR speaker magnet. A Dremel tool with rotating bit can be used to enlarge this opening.


5. Place the included plastic protective magnet cup down into the 3" opening and mark the first of three 9/64th" holes to be drilled, thru the flange and saddlebag lid basket, to secure the plastic cup into the opening.



6. Insert the 6-32 X 1/2" Allen head screw, with washer, up thru the bottom of the basket, thru the cup and secure using the supplied nut plate.



7. Mark the second of three 9/64th" holes to be drilled, drill the hole and then insert the 6-32 X 1/2" Allen head screw, with washer, up thru the bottom of the basket, thru the cup and secure using the supplied nut plate.

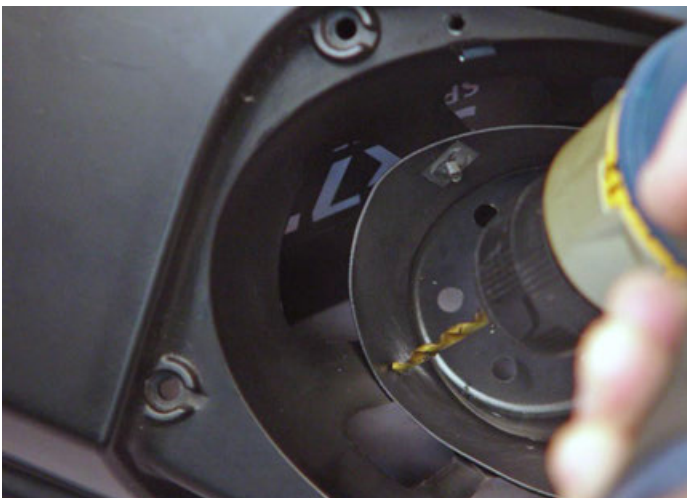

8. Mark the third 9/64th" hole to be drilled, drill the hole and then insert the 6-32 X 1/2" Allen head screw, with washer, up thru the bottom of the basket, thru the cup and secure using the supplied nut plate.

9. Completed protective cup installation and attachment as shown below.



10. Plug the wire to the back of the 5X7" ROKKER XXR speaker and secure in place using the two rear mounting screws ONLY and tighten.

11. Using a 7/64" drill bit, drill new mounting holes for the front 2 mounting screws, then install and tighten.



12. Reinstall the speaker grill using the same 4 mounting screws that you removed previously.

13. Repeat the entire process with the opposite saddlebag lid.

Installation into 2006-2013 Harley Saddlebag Lids

1. Turn saddlebag lid upside down and remove the 4 screws securing the grill to the lid and remove the grill.



2. From the top of the saddlebag lid, remove the 4 screws securing the speaker and as you remove the stock Harley speaker from the lid, unplug the wire connection at the bottom of the speaker.



3. Using a 1" hole saw, drill a 1" hole dead center into the bottom of the speaker shield basket. (This 1" hole is to allow the 5X7" ROKKER XXR speaker magnet to breath and cool the voice coil under high load or volume levels)



4. Plug the wire to the back of the 5X7" ROKKER XXR speaker and secure in place using the same 4 mounting screws that you removed from the stock Harley speaker.
5. Reinstall the speaker grill using the same 4 mounting screws that you removed previously.
6. Repeat the entire process with the opposite saddlebag lid.

Thank you for the confidence you have shown by purchasing one of J&M's innovative products.

