

PARTS INCLUDED

- 1 - GP1 Slip-on Exhaust
- 1 - Muffler Adapter Bracket
- 1 - Muffler Clamp
- 1 - Rubber Strip
- 1 - T-Bolt Clamp
- 1 - M8-1.25x45mm Hex Flange Head Bolt
- 1 - M8-1.25 Hex Flange Nut

TOOLS REQUIRED

- Ratchet
- Sockets
- Allen Sockets
- Wrenches

QUIET MODULE INSERT

- 1 - Quiet Module Insert (QMI)
- 1 - M6-1.00x12mm Button Head Bolt
- 1 - 6mm Locking Star Washer

18-3013-723-02

GP1 SLIP-ON EXHAUST SYSTEM



KAWASAKI NINJA 650R
2006-07

INSTALLATION INSTRUCTIONS

- 1) Make sure the motorcycle is cool and place securely on a service lift or center stand.
- 2) Remove the right side lower fairing from the motorcycle. Carefully set it aside.
- 3) Remove the three allen head bolts securing the right side footpeg assembly to the motorcycle. Move the assembly off to the side. See Figure #1
- 4) Loosen the clamp bolt securing the stock muffler inlet. Remove the two muffler mounting bolts. Retain the rear bolt & nut to be used with the GP1 exhaust. Remove the stock muffler from the motorcycle. See Figure #2
- 5) Using the original rear muffler mounting bolt & nut, mount the supplied muffler adapter bracket to the motorcycle frame. Do not fully tighten at this time. See Figure #3

NOTE: The smaller tube on the muffler adapter bracket has a slight angle. When mounted, this tube should be angled downward to the right of the motorcycle.

- 6) Place the supplied t-bolt clamp over the Jardine GP1 muffler inlet. Slide the muffler onto the headpipe outlet tube.
- 7) Attach the supplied rubber strip to the inside of the muffler clamp. Slide the muffler clamp over the muffler, with the offset holes toward the rear of the motorcycle, and squeeze both muffler clamp tabs together. Secure the muffler clamp to the muffler adapter bracket using the supplied M8-1.25x45mm hex flange head bolt, and M8-1.25 hex flange nut. Do not fully tighten yet. See Figure #4.

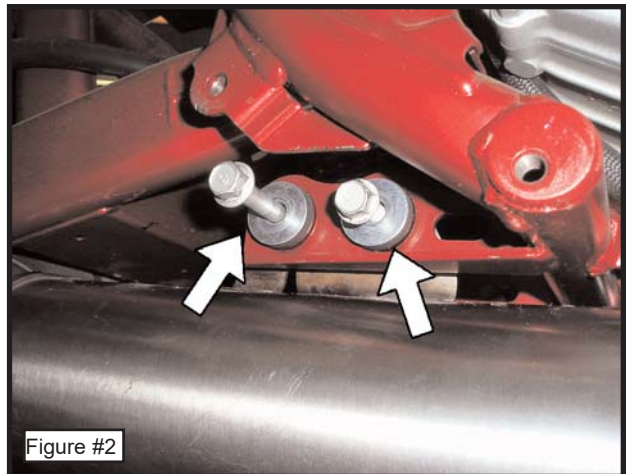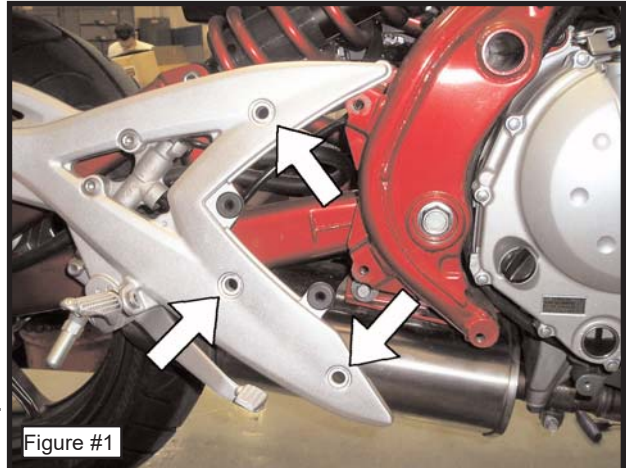

18-3013-723-02

GP1 SLIP-ON EXHAUST SYSTEM

KAWASAKI NINJA 650R
2006-07


INSTALLATION INSTRUCTIONS

- 8) Position the exhaust pipe, fully tighten the t-bolt clamp, the muffler adapter bracket bolt, and then the muffler clamp bolt.
- 9) **Clean all fingerprints and grease from the exhaust pipe, they will burn into the pipe once it gets hot.**
- 10) Start the motorcycle and check for any exhaust leaks.
- 11) Reinstall the lower right side fairing.

OPTIONAL QUIET MODULE INSERT (QMI) INSTALLATION

THE FOLLOWING IS AN OPTIONAL INSTALLATION ONLY. THE QMI IS INSTALLED WHEN THE REGULAR SOUND OUTPUT OF THE GP1 EXHAUST IS TOO MUCH FOR THE RIDER OR LOCAL LAW ENFORCEMENT.

- 1) Follow the above instructions in order to remove the Jardine GP1 exhaust from the motorcycle.
- 2) Carefully place the exhaust system on a workbench or table. A hole must be drilled in the back side of the GP1 megaphone section.
- 3) Measure 2-3/4" from the tip of the megaphone section of the exhaust, and make a mark. See Figure #5.
- 4) Carefully drill a 1/4" hole in the megaphone where you made your mark.
- 5) Slide the QMI insert inside the megaphone and position it so that the threaded hole in the QMI is showing through the new drilled hole. Secure the QMI to the megaphone using the supplied M6-1.00x12mm button head bolt and locking star washer.
- 6) Reinstall the exhaust system to the motorcycle.

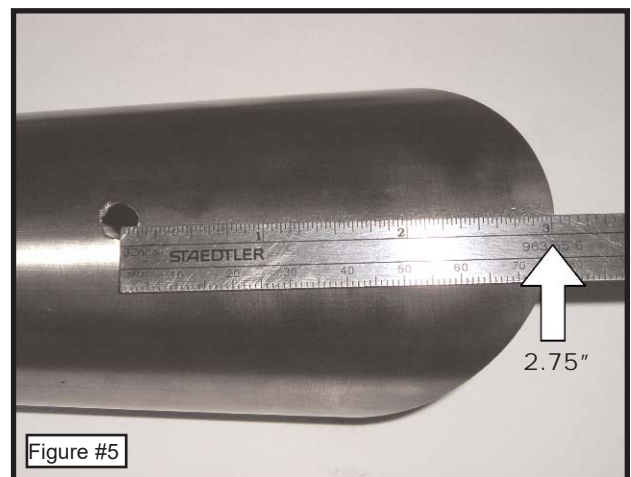

PERFORMANCE DELIVERED!

Learn more about motorcycle parts on our website.