



## ZOMBIE FRONT-SHIFT ARM COVER 1054

FITS: '82-UP DRESSERS, ROAD KINGS, ROAD GLIDES AND STREET GLIDES

### PARTS INCLUDED

- 1 Zombie Front Shift Arm Cover
- 1 Hardware Kit including:
  - 1 5/16 Flat Washer Narrow
  - 1 5/16 Type B Flat Washer
  - 1 5/16-24 x 1-1/4" Button Socket Cap Screw (BSCS)
  - 1 Alcohol Cleaning Pad
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

### THANK YOU FOR CHOOSING KÜRYAKYN!

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.**

**WARNING!** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

**CAUTION!** This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

**ATTENTION!** This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

### TOOLS SUGGESTED

Set of Hex Wrenches, Combination Wrenches

**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**


### PROCEDURE

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

**WARNING!** YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

**STEP 2** Remove the front of the shift linkage from the shift arm, set the nut aside as it will be used to re-install the shift linkage. See PIC.1.

-cont.-

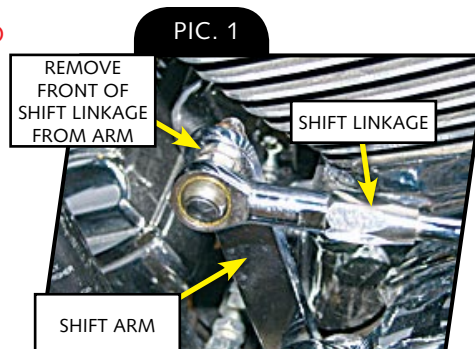

**STEP 3** Test fit the shift arm cover; **PLACE THE WASHERS BETWEEN THE SHIFT ARM AND THE SHIFT ARM COVER.** The narrow washer will go closest to the shift arm and the thicker washer will go toward the Shift Arm Cover.

**STEP 4** Place the Shift Arm Cover on the shift arm; align the hole in the cover with the hole in the shift arm.

**CAUTION!** Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding.

**STEP 5** Reinstall the shift linkage and check for clearance.

**STEP 6** Remove the shift linkage and Shift Arm Cover once the cover has been test fit and fitment is acceptable.

**STEP 7** Clean the shift arm as shown in PIC. 2 with the included alcohol-cleaning pad, and allow the area to thoroughly dry.

**ATTENTION!** Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Küryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

**ATTENTION!** The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

**STEP 8** Using the back of your fingernail, rub the backing on the adhesive to activate the catalyst.


**STEP 9** Remove the backing from the adhesive, and install the cover on the shift arm.

**STEP 10** Attach the shift linkage to the shift arm.

**ATTENTION!** It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

*Ride On!*

PIC. 2

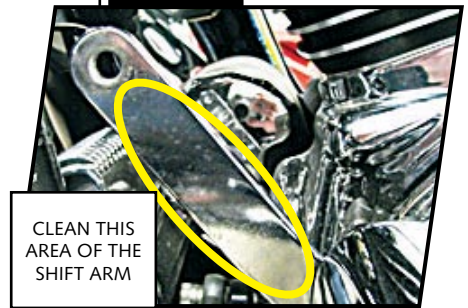

CLEAN THIS  
AREA OF THE  
SHIFT ARM