LOWER TRIPLE TREE WIND DEFLECTOR 1100

FITS:'80-UP ELECTRA GLIDES, ROAD KINGS, ROAD GLIDES, AND STREET GLIDES

PARTS INCLUDED

- 1 Lower Triple Tree Wind Deflector
- 1 Hardware Kit Including:3 1/4-20 Socket Head Cap Screw3 Flat Washers
- 1 Installation Instructions

TOOLS SUGGESTED

Set of hex wrenches

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

PROCEDURE


STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

STEP 2 In order to access the back of the bottom triple tree clamp turn the handlebars to either the left or right.

STEP 3 Line up the three holes on the wind deflector with the three holes on the back of the triple clamp.

STEP 4 Install the three screws and flat washers to secure the wind deflector.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including preassembled) are tightened before operation of the motorcycle. Küryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

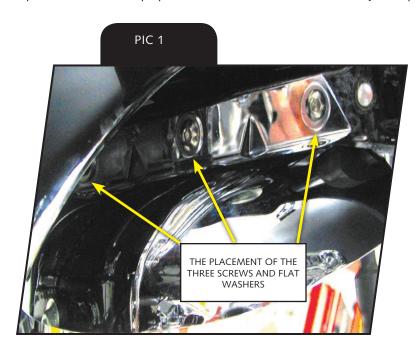

Ride On!



PAGE 2

LOWER TRIPLE TREE WIND DEFLECTOR

INSTALLATION