



KNOCK-OFF CENTER CAPS for FLHTCUTG/FLHXXX

1243

PARTS INCLUDED

- 2 Knock-Off Center Cap Assemblies
- 1 Hardware Kit Containing:
 - 6 #8-32 Phillips Pan Head Screws
 - 6 #8 Flat Washers
 - 6 #8 Lock Washers
 - 2 Center Caps
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.

NOTICE

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

NOTICE

IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.

TOOLS SUGGESTED

Phillips Screwdriver, Cleaning Supplies, Deep Lug Nut Socket

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

STEP 2 Thoroughly clean both of the rear Trike wheels with soapy water and a clean rag. **(For extremely dirty wheels, repeat this and then clean with an ammonia based cleaner such as window cleaner)** Rinse and dry completely. Wipe the installation area (PIC 1) with the included alcohol pads to remove any residue.

NOTICE

Ensure the area of installation is free of grease, oil, dirt or other debris including wax/polish products and bugs to ensure proper adhesion. Kuryakyn **WILL NOT** issue a warranty on any parts lost due to improper installation.

-cont.-

STEP 3 Locate the black Knock-Off Hub Cap base. This is the piece behind the chrome dish with the adhesive tape applied to one side.

STEP 4 Place a deep lug nut socket over one of the lug nuts to act as a guide. PIC 2 Test fit the Base to the rear wheel. The center of the Base will center itself over the raised center portion of the wheel. Make any reference marks with masking tape or a non-permanent marker.

NOTICE The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 4 Remove the Base leaving the deep socket in place. Rub the backing of the adhesive with the back of your fingernail to activate the adhesive. Remove the backing of all four tape pieces.

STEP 5 Carefully slide the Base over the deep lug nut socket and attach it to the wheel. Press in place for one minute. Full bonding will occur in 24 hours. Remove the deep lug nut socket.

STEP 6 Place the chrome Dish over the black Base. The cut-out in the Dish will fit over the screw boss on the Base. PIC 3

STEP 7 Attach the Spinner to the Base using three of the included #8-32 Phillips pan head screws, #8 lock washers and #8 flat washers. PIC 4 Tighten securely.




NOTICE It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

STEP 8 Snap one of the included Center Caps over the Phillips screws.

NOTE: There are three notches (PIC 5) in the Center Cap. Use a small flat blade screwdriver in one of these notches to pry out the Center Cap should you need to disassemble the Knock-Off Hub Cap to service the rear wheel.

STEP 9 Repeat Steps 3-8 for the other wheel.

NOTE: If the motorcycle is to be operated before the 24 hour cure time has expired, use a good quality masking or painter's tape over the Knock-Off Hub Caps to assist in holding them in place until the cure time is over.

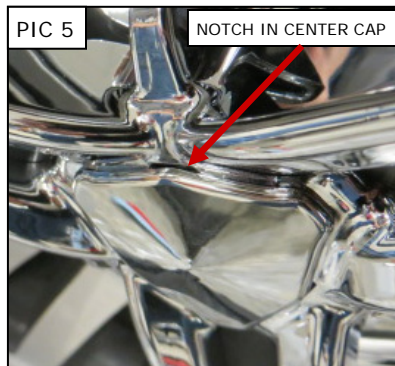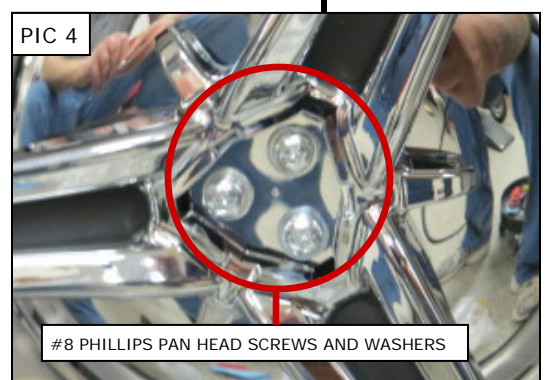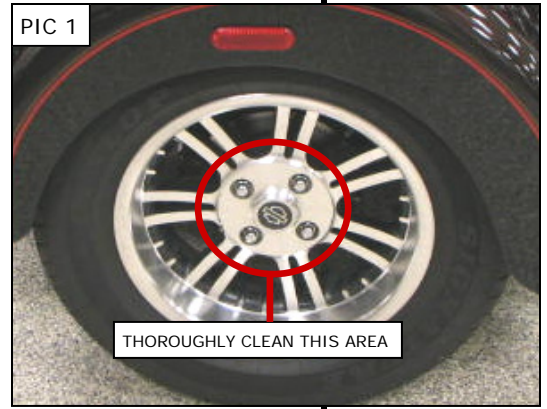

Ride On!