



WINDSHIELD TRIM for ROAD GLIDE 1309

PARTS INCLUDED

- 1 Right Windshield Trim-Black
- 1 Left Windshield Trim-Black
- 1 Middle Windshield Trim-Black
- 1 Hardware Kit Including:
 - 4 Windshield Trim Standoffs
 - 4 #6 Lock Washers
 - 4 #6 Flat Washers
 - 4 #6-32 x 3/8" Button Socket Cap Screws
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.

NOTICE

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

NOTICE

IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.

TOOLS SUGGESTED

Set of Hex Wrenches, Set of Torx Wrenches, Set of Combination Wrenches, Phillips Screwdriver

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.


STEP 1

Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

NOTE: Pictures shown are of Chrome parts. Installation of Black parts will be the same.


NOTE: Will also fit '09 and later CVO Road Glide models if OEM trim is removed and HD part number 58705-98D, windshield trim, (purchased separately from your HD dealer) is installed prior to installing our windshield trim.

STEP 2 Starting with the right side, remove the two windscreen screws, one at a time and install a windshield trim standoff, reusing the plastic washer. The center windscreen screw will not be removed. See PIC.1 and PIC.2.

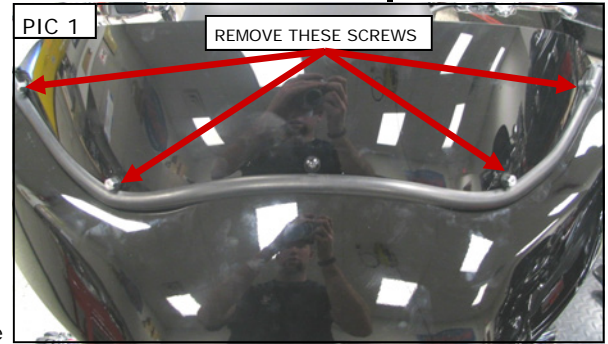

STEP 3 Repeat STEP 2 for the left side.

STEP 4 Install the right and left side trim pieces using a #6-32 x 3/8" Button Socket Cap Screw, #6 lock washer and #6 flat washer in the rear holes only (see PIC.3) do not tighten them yet.

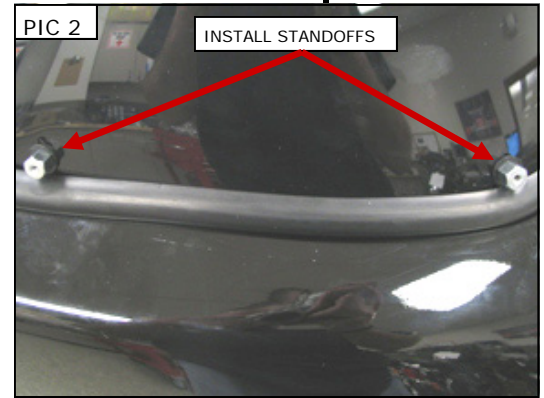

STEP 5 Place the center trim piece in place over the right and left trim pieces as shown in PIC.4. Secure with the #6-32 x 3/8" Button Socket Cap Screws, #6 lock washers and #6 flat washers from the hardware kit.

STEP 6 Tighten all of the screws securing the trim pieces.

NOTICE It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

