



BLACK WINDSHIELD TRIM

1318

PARTS INCLUDED

- 1 Windshield Trim—Black— with Rubber Gasket
- 3 1/4"-20 X 5/8" Button Socket Cap Screws
- 3 1/4"-20 x 7/8" Button Socket Cap Screw
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.

NOTICE	This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.
---------------	---

NOTICE	IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.
---------------	---

TOOLS SUGGESTED

Set of Torx Wrenches, Set of Hex Wrenches


STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

NOTE: Pictures shown are of Chrome parts. Installation of Black parts will be the same.

NOTE: If installing windshield trim on Kuryakyn Airmaster fairing , use the 1/4"-20 x 7/8" Button Socket Cap Screws.

STEP 2 Remove the three Torx head screws that secure the windshield shown in PIC 1. Set these aside, they will not be used again.

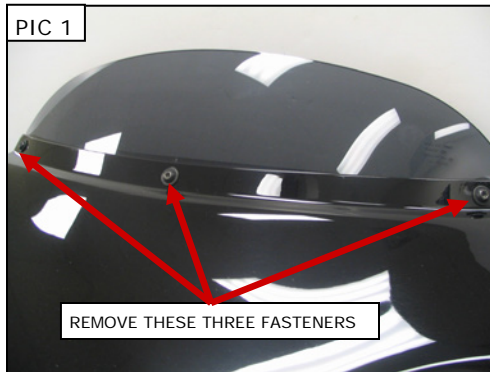

-cont.-

STEP 3 Place the included rubber gasket onto the back of the Black Trim. The tall raised lip on the gasket goes on the top of the Black Trim and faces the windshield. PIC 2

STEP 4 Holding the rubber gasket and Black Trim together, place it on the outer fairing lining up the holes in the trim with the holes in the in the outer fairing and windshield. Loosely install a 1/4" - 20 x 5/8" button head cap screw in the center hole. PIC 3

NOTE: If installing windshield trim on Küryakyn Airmaster fairing, use a 1/4"-20 x 7/8" button socket cap screw in the center hole .

STEP 5 Loosely install a 1/4" - 20 x 5/8" button head cap screw in each outside hole. PIC 4

NOTE: If installing windshield trim on Küryakyn Airmaster fairing, use the 1/4"-20 x 7/8" button socket cap screws in the outside holes.

STEP 6 Making sure the short lip of the rubber gasket is just above the top of the Chrome Trim, PIC 4, tighten the center fastener first (**when tightening the fasteners, make sure the head of the fastener is centered in the recess of the Trim. You may need to push down on the Trim slightly to center the fasteners.**), then the outside fasteners, being careful not to over tighten them, which may damage the trim, windshield or fairing.



NOTICE

It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.