



WINDSHIELD TRIM WITH TURN SIGNALS 1367

**FITS: ALL '01-UP GL1800 MODELS
('06-UP GL1800 MODELS REQUIRE P/N 7300 FOR PLUG & PLAY INSTALLATION)**

PARTS INCLUDED

- 1 Windshield Trim with Turn Signals
- 1 Hardware Kit
 - 2 Alcohol Pads
 - 2 Y-Adapter Plugs
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

STEP 2 Behind the mirror boot, locate the wiring harness with plugs.

NOTE *It may be helpful to move the mirror to gain access to behind the mirror housing.*

STEP 3 Separate the plugs and connect the supplied Y-Adapters between the stock plugs. (PIC 1)

STEP 4 Test fit the accent to the fairing, mark the position of best fit with masking tape to aid in final installation.

NOTE *Make sure that the windshield is locked in to position*

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

NOTE *Make sure that the Windshield Trim wiring is routed out the side as shown in PIC 2.*

-cont.-

STEP 5 Clean the mounting area. If the area is extremely dirty, clean with warm water and a mild soap making sure to remove all surface contaminants. Rinse the area and dry completely. Continue to clean the area with the supplied alcohol pads and allow the surface to dry.

NOTE Be sure that the mounting surface is free of all contaminants including any wax/polish products and bugs.

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Kuryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

STEP 6 Rub the adhesive backing on the Windshield Trim to activate the adhesive. Remove the adhesive backing and apply the Windshield Trim to the fairing using the markings from Step 4 as a guide.

NOTE Make sure that the Windshield Trim wiring is routed out the side of the Windshield Trim as shown in PIC 2.

STEP 7 Press and hold the Windshield Trim in place for one minute, full bonding strength will occur in 24 hours.

STEP 8 Connect the Windshield Trim wiring to the Y-Adapters that were installed in Step 3.

NOTE It does not matter which of the connectors the Windshield Trim is connected to.

STEP 9 Test the function of the Windshield Trim turn signals.


STEP 10 Readjust the mirror and reinstall the mirror boot over the wiring. The windshield trim should sit over the mirror boot (PIC 3).

FOR 2006-LATER GL1800 MODELS

STEP 1 Follow all steps above regarding windshield trim installation, after following the steps required by the p/n 7300 Y-adapter instructions

Ride On!

PIC. 1

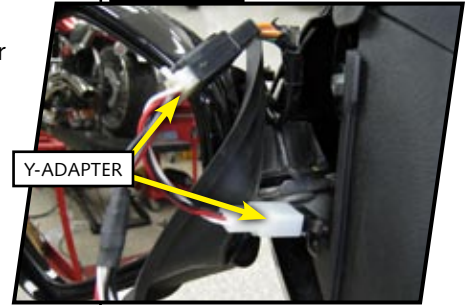

PIC. 2



PIC. 3



PIC. 4



PAGE

2