



Mirror Adaptors for Yamaha 1413

PARTS INCLUDED

- 1 5/16-18 to M10-1.25 Left Handed Threaded Stud
- 1 5/16-18 to M10-1.25 Right Handed Threaded Stud
- 1 M10-1.25 Jam Nut Left Hand Thread
- 1 M10-1.25 Jam Nut Right Hand Thread
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED


Set of Hex Wrenches, Metric and Standard Wrenches

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

Right Side Mirror



STEP 2 Place a drop of Red Loctite on the end of the adapter that threads into the mirror and thread the M10-1.25 adapter with right hand threads into the stem of the right side mirror that you are mounting to the bike until it bottoms. **DO NOT exceed 20 foot pounds of torque** when tightening the adapter to the mirror stem. Secure with set screw if applicable to your mirrors. PIC 1

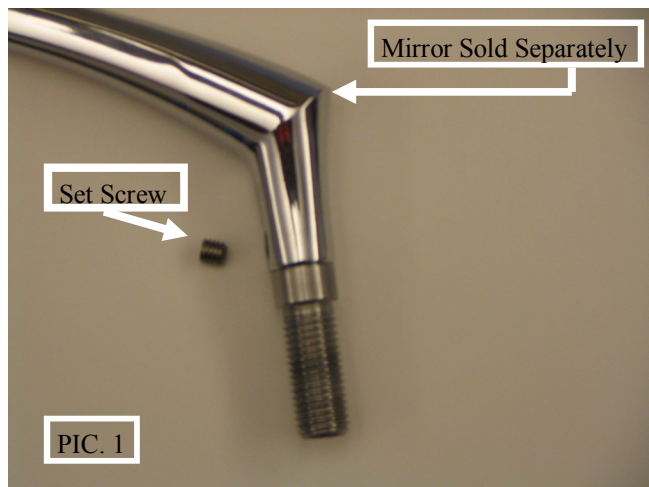

STEP 3 Thread the jam nut with right hand threads to opposite end of adapter until loosely seated against stop. PIC 2

STEP 4 Thread mirror and adapter assembly to mounting point on right side of bike until loosely seated. Back (unthread) the assembly out to the desired vision position.

STEP 5 Thread jam nut down adapter to the stock mirror mounting point. Finger tighten. PIC 3

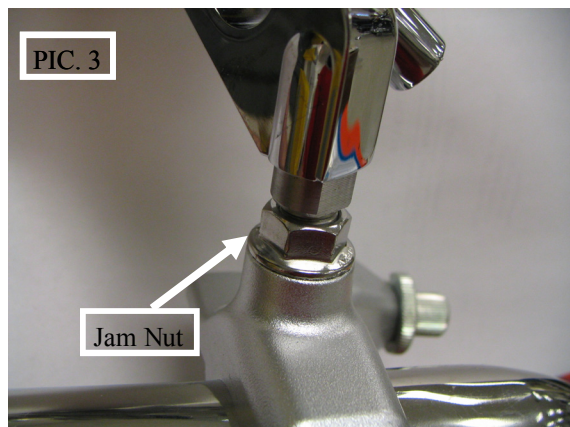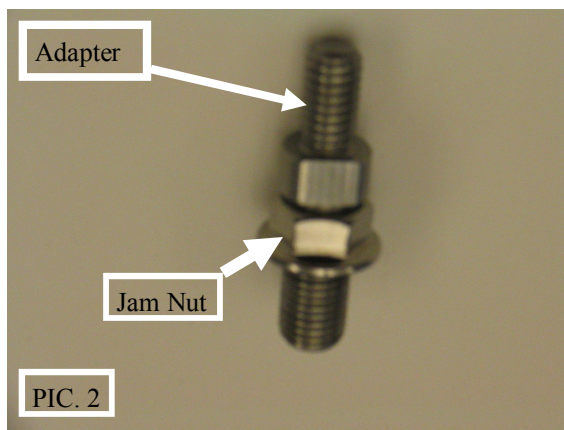

STEP 6 Holding the adapter with a wrench in adjusted position, tighten jam nut to the stock mirror mounting point.

Left Side Mirror

STEP 7 Place a drop of Red Loctite on the end of the adapter that threads into the mirror and thread the M10-1.25 adapter with left hand threads into the stem of the left side mirror that you are mounting to the bike until it bottoms. **DO NOT exceed 20 foot pounds of torque** when tightening the adapter to the mirror stem. Secure with set screw if applicable to your mirrors. PIC 1

STEP 8 Thread mirror and adapter assembly to the stock mirror mounting point on left side of bike until loosely seated.

STEP 9 Thread jam nut down adapter to mounting point. Finger tighten. PIC 3

STEP 10 Thread mirror and adapter assembly to mounting point on left side of bike until loosely seated. Back (unthread) the assembly out to the desired vision position.

STEP 11 Holding the adapter with a wrench in adjusted position, tighten jam nut to the stock mirror mounting point.

STEP 12 Tighten all fasteners.

ATTENTION!

It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

Ride On!