



**STANDARD ACCESSORY MOUNT for HANDLEBARS**

**1671**

**PARTS INCLUDED**

- 1 Standard Accessory Mount for Handlebars—Black
- 1 Top Clamp Half
- 1 Bottom Clamp Half
- 1 Hardware Kit Containing:
  - 2 1" Bar Reducer—Black
  - 2 7/8" Bar Reducer—Black
  - 1 1/4" Flat washer
  - 1 1/4" Lock Washer
  - 1 1/4"-20 Low Crown Acorn Nut
  - 6 #8-32 X 3/4" Phillips Head Pan Screws
  - 6 #8-32 Nylock Nuts
  - 8 #8 SAE Flat Washers
  - 4 6" Black Nylon Cable Ties
  - 1 Anti-Seize Package
- 1 Installation Instructions

*Please read and understand entire instructions before starting installation.*

**THANK YOU FOR CHOOSING KÜRYAKYN!**

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.**

**WARNING**

**THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.**

**NOTICE**

**This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product it is being attached to.**

**CAUTION**

**This indication alerts you to the fact that ignoring the contents described herein can result in minor or moderate potential injury.**

**TOOLS SUGGESTED**

Small Phillips Head Screwdriver, Set of Combination Wrenches

**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**

**NOTICE**

**IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.**

**STEP 1**

Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.



Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding.



Avoid damage to the motorcycle. Protect painted surfaces with a soft cloth or blanket.



It is the installer's responsibility to ensure that there is adequate clearance between the Tech-Connect and any painted surfaces. Küryakyn is not responsible for any damage due to inadequate clearance.



Be aware of any cables/wires that could potentially be pinched or crushed while using this product.

**STEP 2** Place a clean, soft blanket over the gas tank to protect the paint.

**STEP 3** Determine the diameter of the bars, 7/8", 1" or 1-1/4", that are on the motorcycle. The Standard Accessory Mount includes reducers that allow it to fit these sizes. Use the thicker set for 7/8" bars, the thinner set for 1" bars (these reducers are marked with their size on the inside, PIC 2) and the clamp alone for 1-1/4" bars. PIC 1 and PIC 2



Use the supplied anti-seize for fasteners; this will prevent galling and make future removal of fasteners easier.

**STEP 4** Using the correct clamp reducers (if needed-PIC 1), install the clamp to a straight portion of the handlebars, in the desired location with two of the included #8-32 X 3/4" Phillips Head Screws and #8-32 nylock nuts. PIC 3 Leave snug for now.

**STEP 5** Install the Standard Accessory Mount to the handlebar mount by inserting the metal shaft through the hole in the handlebar mount. The hex flats on the metal shaft will line up with the hex flats in the hole. PIC 4 Secure the Standard Accessory Mount with the included 1/4" flat washer, then the 1/4" lock washer, then the Acorn nut. PIC 5 Tighten securely.

**STEP 6** Turn the handlebars in both directions to their full stop position and ensure that there is clearance between the mounting plate/accessory and the gas tank, dash and other accessories. Adjust the clamp position if required. Tighten the #8-32 clamp screws securely.







ENSURE THAT THERE IS CLEARANCE AT ALL POINTS WHEN THE HANDLEBARS ARE TURNED, INSUFFICIENT CLEARANCE MAY CAUSE DAMAGE TO THE MOTORCYCLE OR CAN CAUSE LOSS OF CONTROL THAT COULD RESULT IN SEVERE INJURY OR DEATH.



TO PREVENT POSSIBLE LOSS OF CONTROL, WHICH COULD RESULT IN A POSSIBLE INJURY OR DEATH, WE DO NOT RECOMMEND REMOVING, REPLACING OR ADJUSTING THE DEVICE ON THE ACCESSORY MOUNT PLATE WHILE RIDING THE MOTORCYCLE .



It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

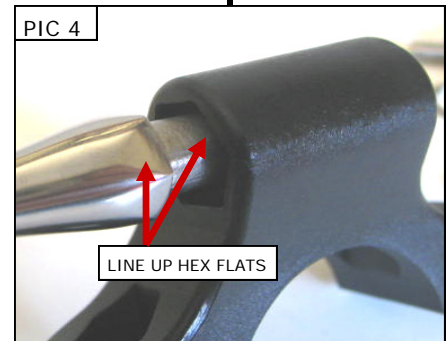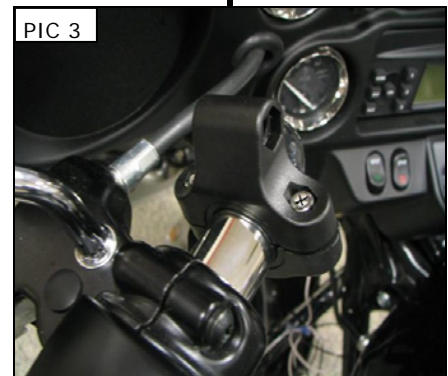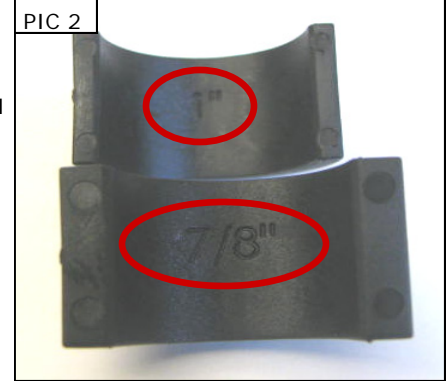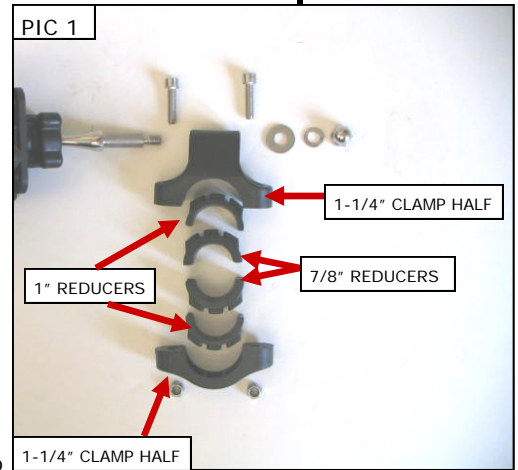

**USING THE ACCESSORY MOUNT PLATE**

**STEP 1** The Accessory Mount Plate has a variety of slots and holes to allow you to mount many different mobile device holders. PIC 5 Use the included #8 screws, washers and lock nuts to secure the device holder (sold separately) to the Accessory Mount Plate.

- A**—Standard AMPS pattern
- B**—Kuryakyn Tech-Connect pattern and Ram Mount pattern
- C**—Kuryakyn Accessory Pouches pattern

**STEP 2** To remove the Accessory Mount from the bike for storage, loosen the tensioning nut on the back side of the holder until it clears the threads. PIC 7 Snap the Accessory Mount off of the ball. PIC 8 Remove the tension nut and thread it to the Accessory Mount for storage.

**STEP 3** To replace the Accessory Mount on the swivel ball, remove the tension nut from the back. Slide the tension nut over the swivel ball, snap the Accessory Mount back on the swivel ball and thread the tension nut onto the Accessory Mount. Tighten the tension nut to the desired tension.

**STEP 4** To adjust the angle of the Accessory Mount, loosen the tensioning nut, adjust the Accessory Mount to the desired position and tighten the tension nut. PIC 7 The tension nut will allow you to keep the Accessory Mount in the same position or, with a little less tightness, allow you to move the Accessory Mount on the swivel ball.

**WARNING** DO NOT ATTEMPT TO OPERATE OR REMOVE THE MOBILE DEVICE FROM THE MOUNT PLATE WHILE OPERATING THE MOTORCYCLE.

**WARNING** ENSURE THAT THERE IS CLEARANCE AT ALL POINTS WHEN THE HANDLEBARS ARE TURNED, INSUFFICIENT CLEARANCE MAY CAUSE DAMAGE TO THE MOTORCYCLE OR CAN CAUSE LOSS OF CONTROL THAT COULD RESULT IN SEVERE INJURY OR DEATH.

**NOTICE** Ensure that the Mobile Device is secure on the Standard Accessory Mount. Kuryakyn is not responsible for any Device that is stolen or damaged from use on this Mount or from the Mount not being properly secured to the motorcycle. It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not issue a warranty on components lost due to improper installation. Periodic inspection and maintenance are required on all fasteners.

**NOTICE** Motorcycling can be done in a harsh environment. Make sure your Mobile Device is appropriate for this application.

