



STANDARD ACCESSORY MOUNT with PERCH MOUNT 1672

PARTS INCLUDED

- 1 Standard Accessory Mount with Pivot Mount—Black
- 1 Perch Mount—Black
- 1 Hardware Kit Containing:
 - 2 Perch Mount Spacers
 - 2 1/4"-20 X 2" Button Socket Cap Screws
 - 2 1/4"-20 X 2-1/4" Button Socket Cap Screws
 - 2 M6 X 1.0 X 55mm Button Socket Cap Screws
 - 3 1/4" Flat Washers
 - 1 1/4" Lock Washer
 - 1 1/4" Low Crown Acorn Nut
 - 4 #8-32 X 3/4" Phillips Head Pan Screws
 - 4 #8 Nylock Nuts
 - 8 #8 Flat Washers
 - 4 6" Black Nylon Cable Ties
 - 1 Package Anti Seize
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.

⚠ WARNING	THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.
NOTICE	This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product it is being attached to.
⚠ CAUTION	This indication alerts you to the fact that ignoring the contents described herein can result in minor or moderate potential injury.

TOOLS SUGGESTED

Set of Hex Wrenches, Set of Torx Wrenches (for H-D installations)

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

NOTICE	IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.
---------------	---

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

⚠ CAUTION	Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding.
------------------	--

NOTICE

Avoid damage to the motorcycle. Protect painted surfaces with a soft cloth or blanket.

NOTICE

It is the installer's responsibility to ensure that there is adequate clearance between the Accessory Mount and any painted surfaces. Küryakyn is not responsible for any damage due to inadequate clearance.

NOTICE

Be aware of any cables/wires that could potentially be pinched or crushed while using this product.

STEP 2

Place a clean, soft blanket over the gas tank to protect the paint.

STEP 3

Remove the bottom screw securing the clutch or brake perch halves. The arm will usually point towards the center of the bike. Set this aside, it will not be used again.

STEP 4

Identify the correct screw, either the metric or standard, by comparing threads on the included screws to the threads from the screws that were removed. The 1/4"-20 x 2-1/4" screws are generally used on older H-D motorcycles, the 1/4"-20 X 2" screws on newer Harleys and the M6 X 1.0 X 55mm on Metric bikes.

NOTICE

Use the supplied anti-seize for fasteners; this will prevent galling and make future removal of fasteners easier.

STEP 5

As shown in PIC 2, insert the two included spacers into the two slots in the perch mount. Place a washer over one of the button socket cap screws, then insert it through the bottom spacer on the perch mount arm. Add a dab of anti-seize to the screw end.

STEP 6

As shown in PIC 3, place the arm, screw, washer and spacer on the perch and start the screw. Finger tighten the screw.

STEP 7

Remove the upper screw securing the perch mounting halves; it will not be used again. PIC 3

STEP 8

Rotate the arm up into position and install the screw, and washer while using a dab of anti-seize on the screw end. PIC 4

STEP 9

Tighten both of the screws securely.

STEP 10





Install the Accessory Mount to the perch mount by inserting the metal shaft through the hole in the perch mount. The hex flats on the metal shaft will line up with the hex flats in the hole. PIC 5 Secure the Accessory Mount with the included 1/4" flat washer, then the 1/4" lock washer, then the Acorn nut. PIC 6 Tighten securely.

STEP 11

Turn the handlebars in both directions to their full stop position and ensure that there is clearance between the mounting plate/accessory and the gas tank, dash and other accessories.

WARNING

ENSURE THAT THERE IS CLEARANCE AT ALL POINTS WHEN THE HANDLEBARS ARE TURNED, INSUFFICIENT CLEARANCE MAY CAUSE DAMAGE TO THE MOTORCYCLE OR CAN CAUSE LOSS OF CONTROL THAT COULD RESULT IN SEVERE INJURY OR DEATH.

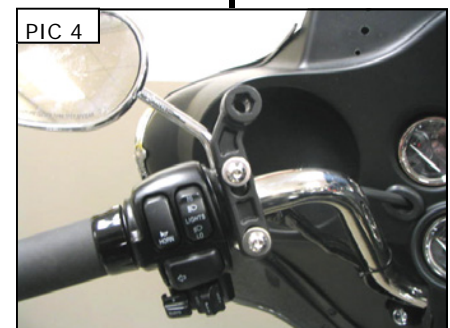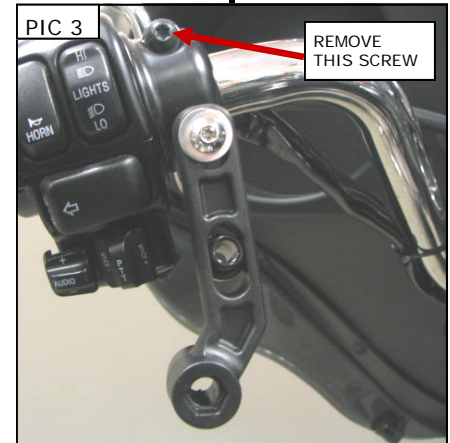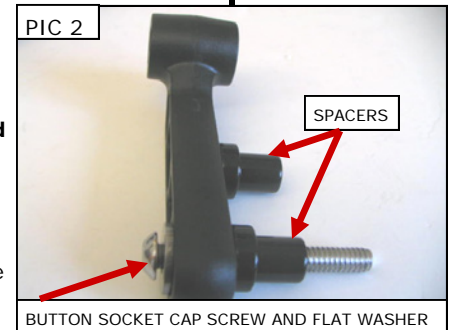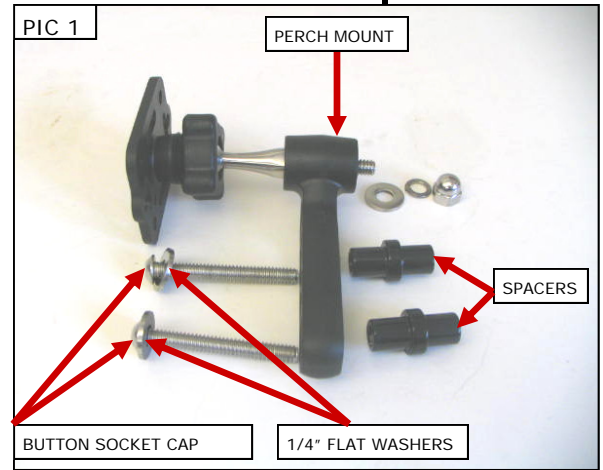

-cont.-



TO PREVENT POSSIBLE LOSS OF CONTROL, WHICH COULD RESULT IN A POSSIBLE INJURY OR DEATH, WE DO NOT RECOMMEND REMOVING, REPLACING OR ADJUSTING THE DEVICE ON THE ACCESSORY MOUNT PLATE WHILE RIDING THE MOTORCYCLE.



It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

USING THE ACCESSORY MOUNT PLATE

STEP 1 The Standard Accessory mount has a variety of slots and holes to allow you to mount many different mobile device holders. PIC 7 Use the included #8 screws, washers and lock nuts to secure the device holder (sold separately) to the Accessory Mount.

- A**—Standard AMPS pattern
- B**—Kuryakyn Tech-Connect pattern and Ram Mount pattern
- C**—Kuryakyn Accessory Pouches pattern

STEP 2 To remove the Accessory Mount from the bike for storage, loosen the tensioning nut on the back side of the holder until it clears the threads. PIC 8 Snap the Accessory Mount off of the ball. PIC 9 Remove the tension nut and thread it to the Accessory Mount for storage.

STEP 3 To replace the Accessory Mount on the swivel ball, remove the tension nut from the back. Slide the tension nut over the swivel ball, snap the Accessory Mount back on the swivel ball and thread the tension nut onto the Accessory Mount. Tighten the tension nut to the desired tension.

STEP 4 To adjust the angle of the Accessory Mount, loosen the tensioning nut, adjust the Accessory Mount to the desired position and tighten the tension nut. PIC 8 The tension nut will allow you to keep the Accessory Mount in the same position or, with a little less tightness, allow you to move the Accessory Mount on the swivel ball.



DO NOT ATTEMPT TO OPERATE OR REMOVE THE MOBILE DEVICE FROM THE ACCESSORY MOUNT WHILE OPERATING THE MOTORCYCLE.







ENSURE THAT THERE IS CLEARANCE AT ALL POINTS WHEN THE HANDLEBARS ARE TURNED, INSUFFICIENT CLEARANCE MAY CAUSE DAMAGE TO THE MOTORCYCLE OR CAN CAUSE LOSS OF CONTROL THAT COULD RESULT IN SERIOUS INJURY OR DEATH.



Ensure that the Mobile Device is secure on the Standard Accessory Mount. Kuryakyn is not responsible for any Device that is stolen or damaged from use on this Mount or from the Mount not being properly secured to the motorcycle. It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not issue a warranty on components lost due to improper installation. Periodic inspection and maintenance are required on all fasteners.



Motorcycling can be done in a harsh environment. Make sure your Mobile Device is appropriate for this application.

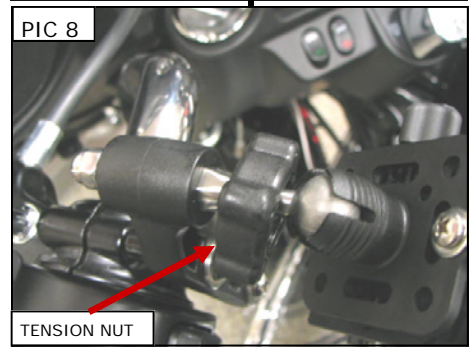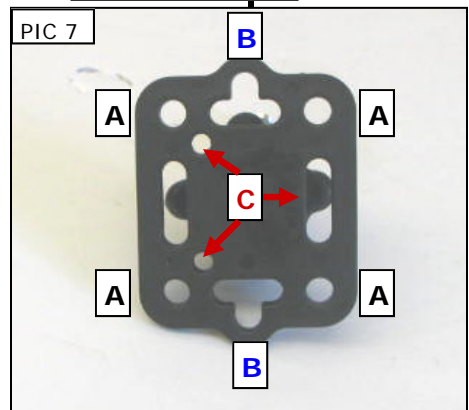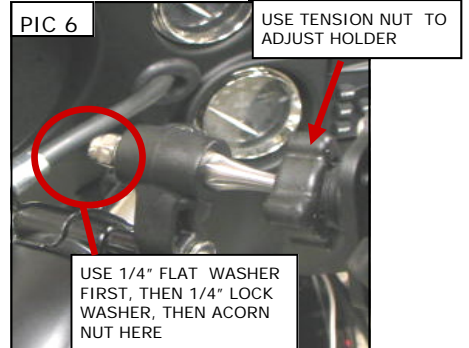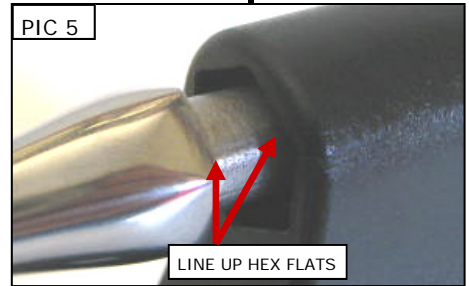

Ride On!