



PREMIUM ACCESSORY PIVOT MOUNT for 1-1/4" BARS 1678

PARTS INCLUDED

- 1 Accessory Mounting Plate—Black
- 1 1-1/4" Handlebar Clamp—Chrome
- 1 Pivot Plate Mount Kit
 - 4 #8-32 X 1" Phillips Head Pan Screws
 - 4 #8-32 Nylock Nuts
 - 4 #8 Flat Washers
 - 4 6" Black Nylon Cable Ties
 - 1 Anti-Seize Packet
- 1 Hardware Kit
 - 2 Shim Washers
 - 1 5/16" Split Lock Washer
 - 1 Thumb Nut
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING	THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.
NOTICE	This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product it is being attached to.
CAUTION	This indication alerts you to the fact that ignoring the contents described herein can result in minor or moderate potential injury.

TOOLS SUGGESTED

Set of Combination Wrenches, Adjustable Wrench, Set of Hex Wrenches

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

NOTICE **IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.**

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

CAUTION **Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding.**

NOTICE

Determine the mounting location and orientation of the Accessory Mount before fully tightening the two Clamp screws. The Clamp may leave marks on the handlebar when tightened down.

NOTICE


Avoid damage to the motorcycle. Protect painted surfaces with a soft cloth or blanket.

NOTICE

It is the installer's responsibility to ensure that there is adequate clearance between the Accessory Mount and any painted surfaces. Küryakyn is not responsible for any damage due to inadequate clearance.

NOTICE

Be aware of any cables/wires that could potentially be pinched or crushed while using this product.

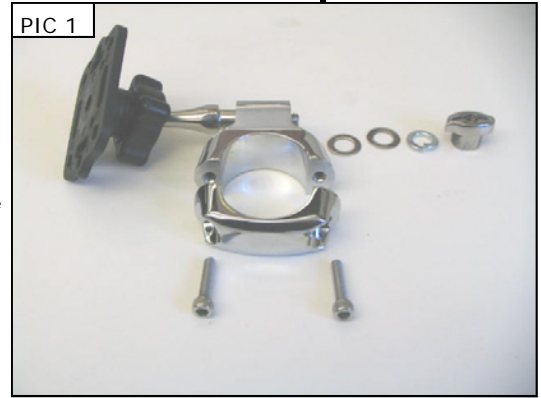

STEP 2 Place a clean, soft blanket over the gas tank to protect the paint.


NOTICE

Use the supplied anti-seize for fasteners; this will prevent galling and make future removal of fasteners easier.

STEP 3 Separate the clamp and place the clamp halves around a straight portion of the handlebar. Apply anti-seize to the two clamp screws and finger tighten the clamp to the bar.

NOTE: The Clamp can be installed on the top or bottom side of the handlebar for best riding position.

STEP 4 As Shown in PIC 2, insert the threaded stud of the Accessory Mount into the clamp. Place the 5/16" Lock Washer and one or two shim washers from the hardware kit to the stud. Thread the included Thumb Nut onto the stud. Tighten securely.

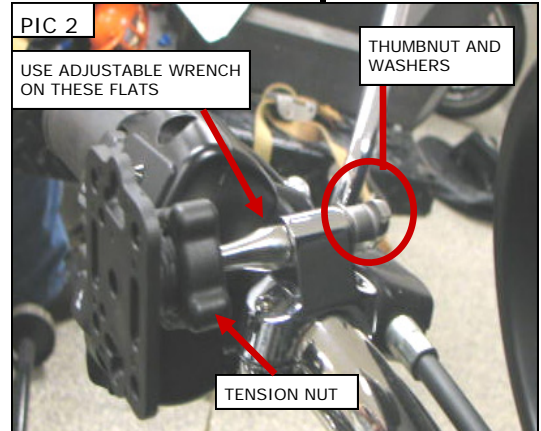

NOTE: You may need to use an adjustable wrench to hold the hex portion of the shaft, and a flat blade screwdriver in the slot on the Thumb Nut, when tightening. PIC 2 Periodically check the tightness of the Thumb Nut.

STEP 5 Turn the handlebars in both directions to their full stop position and ensure that there is clearance between the mounting plate/accessory and the gas tank, dash and other accessories.

WARNING

ENSURE THAT THERE IS CLEARANCE AT ALL POINTS WHEN THE HANDLEBARS ARE TURNED, INSUFFICIENT CLEARANCE MAY CAUSE DAMAGE TO THE MOTORCYCLE OR CAN CAUSE LOSS OF CONTROL THAT COULD RESULT IN SEVERE INJURY OR DEATH.

WARNING

TO PREVENT POSSIBLE LOSS OF CONTROL, WHICH COULD RESULT IN A POSSIBLE INJURY OR DEATH, WE DO NOT RECOMMEND REMOVING, REPLACING OR ADJUSTING THE DEVICE ON THE ACCESSORY MOUNT PLATE WHILE RIDING THE MOTORCYCLE .

NOTICE

It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

-cont.-

USING THE ACCESSORY MOUNT PLATE



STEP 1 The Accessory Mount Plate has a variety of slots and holes to allow you to mount many different mobile device holders. PIC 3 Use the included #8 screws, washers and lock nuts to secure the device holder (sold separately) to the Accessory Mount Plate.

- A**—Standard AMPS pattern
- B**—Küryakyn Tech-Connect pattern and Ram Mount pattern
- C**—Küryakyn Accessory Pouches pattern

STEP 2 To remove the Accessory Mount Plate from the bike for storage, simply remove the Thumb Nut and washers from the Accessory Mount Plate and remove the plate from the mount. PIC 4

STEP 3 To replace the Accessory Mount, insert the threaded stud of the Accessory Mount into the clamp. Place the 5/16" Lock Washer and one or two shim washers from the hardware kit to the stud. Thread the included Thumb Nut onto the stud. Tighten securely. PIC 2

STEP 4 To adjust the angle of the Accessory Mount, loosen the tensioning nut, adjust the Accessory Mount to the desired position and tighten the tension nut. PIC 2 The tension nut will allow you to keep the Accessory Mount in the same position or, with a little less tightness, allow you to move the Accessory Mount on the swivel ball.

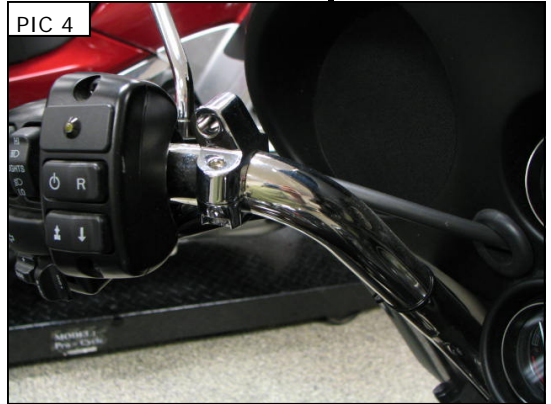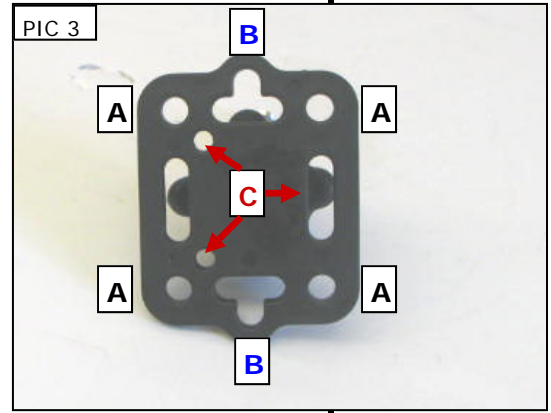

WARNING DO NOT ATTEMPT TO OPERATE OR REMOVE THE MOBILE DEVICE FROM THE MOUNT PLATE WHILE OPERATING THE MOTORCYCLE.

WARNING ENSURE THAT THERE IS CLEARANCE AT ALL POINTS WHEN THE HANDLEBARS ARE TURNED, INSUFFICIENT CLEARANCE MAY CAUSE DAMAGE TO THE MOTORCYCLE OR CAN CAUSE LOSS OF CONTROL THAT COULD RESULT IN SEVERE INJURY OR DEATH.

NOTICE Ensure that the Mobile Device is secure on the Accessory Mount. Küryakyn is not responsible for any Device that is stolen or damaged from use on this Mount or from the Mount not being properly secured to the motorcycle. It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not issue a warranty on components lost due to improper installation. Periodic inspection and maintenance are required on all fasteners.

NOTICE Motorcycling can be done in a harsh environment. Make sure your Mobile Device is appropriate for this application.