



PASSENGER DRINK HOLDER WITH BASKET—'14-UP TOURING 1692

THANK YOU FOR CHOOSING KÜRYAKYN!

PROTECT YOURSELF AND OTHERS FROM POSSIBLE INJURY AND PROPERTY DAMAGE OR LOSS. PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS, AND NOTICES REGARDING THE INSTALLATION, USE, AND CARE OF THIS PRODUCT.

WARNING	THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.
CAUTION	This indication alerts you to the fact that ignoring the contents described herein can result in minor or moderate potential injury.
NOTICE	This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product to which it is being attached.

MAKE SURE THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Passenger Drink Holder Arm
- 1 Passenger Drink Holder Assembly
- 1 Hardware Kit:
 - 1 Alcohol Pad
 - 1 Protective Tape
 - 1 1/4" Wave Washer
 - 1 1/4" Split Lock Washer
 - 1 Thumb Nut
- 1 Installation Instructions

TOOLS SUGGESTED:


Set of combination wrenches, set of Torx drivers, set of sockets and ratchet, warm soapy water and a clean rag, masking tape, in-lbs torque wrench

NOTICE These installation instructions contain important information. Ensure that the end user receives this copy and is aware of its importance for future reference.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

STEP 2 Use masking tape to mark the rearward edge of the right-side speaker pod as shown in **PIC 1**.

STEP 3 Open the Tour Pak™ lid.

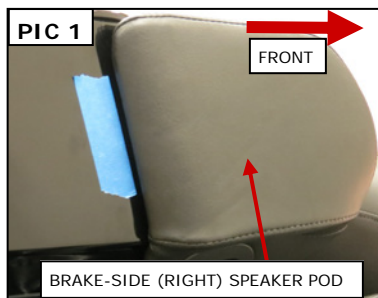

STEP 4 On the front of the Tour Pak™, locate and remove the two Torx screws shown in **PIC 2**. Removing the screws will release the tether anchor.

NOTICE

With the screws removed, the tether anchor can retract rapidly causing damage to the motorcycle. Secure the tether while the screws are being removed.

NOTE: Get someone to help secure the Tour Pak™ lid until the tether anchor is reattached to prevent the lid from opening too far.

STEP 5 Remove the Tour Pak™ liner; pull upward on the rear of the liner to remove it.

STEP 6 With the lid open, reattach the tether anchor. Do not over tighten the screws.

STEP 7 Remove the two lower hex head screws and washers shown in **PIC 3**; set them aside for now they will be reused. Let the power outlet (if equipped) hang for now.

NOTICE

Avoid damage to the motorcycle. Protect painted surfaces with a soft cloth or service cover.

STEP 8 Cover the right-side saddlebag lid with a soft cloth or service cover. Refer to **PIC 3**. Inside the Tour Pak™, loosen, but do not remove, the top hex head screw until the speaker pod can be removed. Set the speaker pod on the soft cloth or service cover. Ensure the bass port and gasket remain in place.




STEP 9 Using warm soapy water and a clean rag, remove all dirt, polish, and other debris from the area shown in **PIC 4**. Wipe the area with the included alcohol pad to remove any remaining polish/wax. Allow the area to dry completely.

STEP 10 Remove and discard the backing from the Protective Tape.

STEP 11 Refer to **PIC 4**. Using the masking tape mark as a guide, apply the Protective Tape to the Tour Pak™ just forward of the masking tape; smooth out any air bubbles with your finger. Remove and discard the masking tape.

STEP 12 Refer to **PIC 5**. Ensure the bass port flange is fully seated in the hole, then position the included Passenger Drink Holder Arm over the top screw; align the speaker pod with the bass port flange and attach it with the top screw. Leave the screw finger tight for now.

STEP 13 Inside the Tour Pak™, align the power outlet with the lower holes. Insert the two lower screws and thread them into the speaker pod; torque the three hex head screws to 20-25 in-lbs (2.3-2.8 Nm).

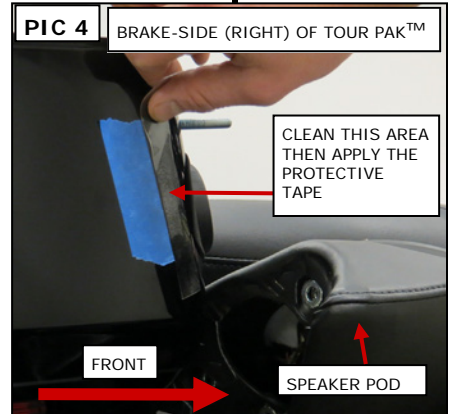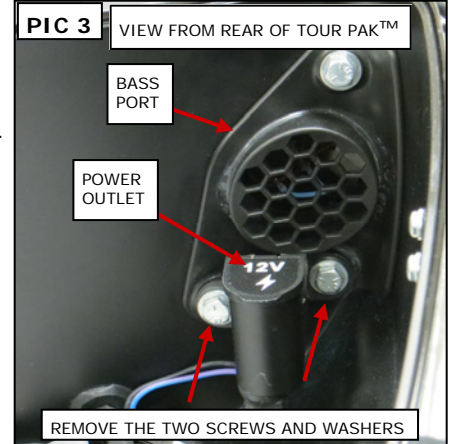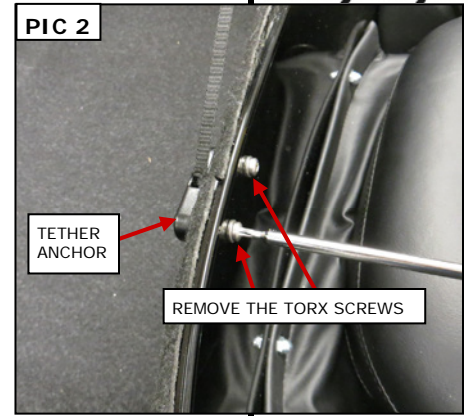

-cont.-

STEP 14 Get someone to help secure the lid; remove the tether anchor, reinstall the liner, then reinstall the tether anchor; **torque the two Torx screws to 25-35 in-lbs (2.8-3.9 Nm)**. Close the lid.

STEP 15 Locate the Drink Holder; place the included Wave Washer over the threaded stud on the Drink Holder.

STEP 16 Refer to **PIC 6**. Insert the threaded stud through the hole in the Arm. Place the included Lock Washer over the stud; secure the Drink Holder to the Arm with the included Thumb Nut. Use an open end wrench to tighten the thumb nut.



CAUTION

This product was designed for use as a drink holder only. Do not use the drink holder to mount or dismount the motorcycle. Do not apply your body weight to the drink holder to adjust your seating position. Damage and injury may result from improper use.

NOTICE

It is the end user's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

Ride On!