



RAISED MIRROR ADAPTERS

1713

THANK YOU FOR CHOOSING KÜRYAKYN!

PROTECT YOURSELF AND OTHERS FROM POSSIBLE INJURY AND PROPERTY DAMAGE OR LOSS. PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS, AND NOTICES REGARDING THE INSTALLATION, USE, AND CARE OF THIS PRODUCT.

WARNING	THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.
CAUTION	This indication alerts you to the fact that ignoring the contents described herein can result in minor or moderate potential injury.
NOTICE	This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product to which it is being attached.

MAKE SURE THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 2 Raised Mirror Adapters
- 1 Hardware Kit containing:
 - 2 5/16" Internal Tooth Lock Washers
- 1 Installation Instructions

YOU WILL ALSO NEED:

Set of Metric combination wrenches, screwdrivers, Torx drivers, hex wrenches


NOTICE These installation instructions contain important information. Ensure that the end user receives this copy and is aware of its importance for future reference.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn **IGN OFF**.

STEP 2 Remove the existing mirrors.

Refer to **PIC 1**. It may be necessary to loosen or remove the lever mount and rotate it rearward to gain enough clearance to unthread the existing mirrors.

Use a piece of masking tape and a marker to mark the location of the lever mount.

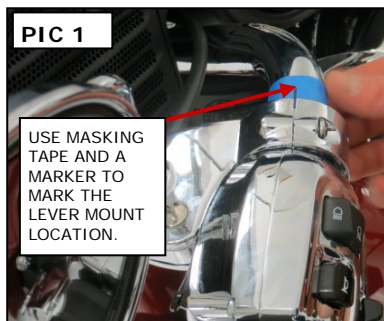

NOTICE Avoid damage to the motorcycle. Protect painted surfaces with a soft cloth or blanket.

STEP 3

Refer to **PIC 2 and 3**. Thread one of the included Raised Mirror Adapters into the mirror mount hole.

Ensure that the jam nut has been threaded all the way to the top of the threads; this will allow for the most thread engagement in the lever mount.

Leave the Adapter and jam nut loose for now to allow for adjustment.

STEP 4

Place one of the included 5/16" Internal Tooth Lock Washers over the top of the adapter.

STEP 5

Refer to **PIC 4**. Thread the new mirror onto the Adapter; using a 12MM wrench to hold the adapter, tighten the mirror as shown in **PIC 5**.

STEP 6

Follow the specific instructions included with the new mirror to complete the installation.

STEP 7

If necessary, rotate the lever mount back into place and tighten the screws.

STEP 8


Adjust the mirror stem to your liking; use a 13MM wrench to tighten the jam nut down against the lever mount; use a 12MM wrench to hold the adapter in place while the jam nut is being tightened.

STEP 9

Repeat for the other side.

STEP 10

Adjust the mirrors to your liking and ensure that they do not interfere with the proper operation of the motorcycle **BEFORE** riding.

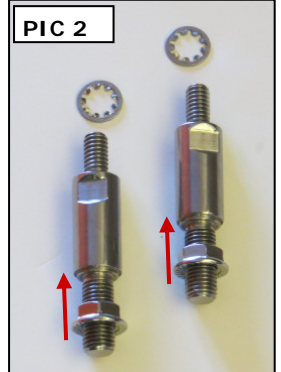

PIC 2
THREAD THE JAM NUTS UP BEFORE INSTALLING THEM



NOTICE

It is the end user's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not provide warranty coverage on products or components lost or damaged due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

Ride On!