

INSTALLATION INSTRUCTIONS

ZOMBIE™ LEVERS FOR TOURING, GLOSS BLACK

1983

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

1	Brake Lever	2	Zombie Emblems
1	Clutch Lever	2	Grooved Emblems
		1	Alcohol Pad

YOU WILL ALSO NEED:

Snap-ring pliers, needle-nose pliers, grease, Phillips screw driver

PICTURES SHOWN ARE OF THE CHROME PARTS. INSTALLATION OF THE BLACK PARTS WILL BE THE SAME.

NOTICE THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool. Remove main fuse.

WARNING A FACTORY SERVICE MANUAL WILL BE HELPFUL IN PERFORMING THIS INSTALLATION. DO NOT ATTEMPT TO PERFORM THIS INSTALLATION IF YOU ARE NOT CONFIDENT IN YOUR ABILITY TO COMPLETE ALL OF THE STEPS IN THE PROCEDURE; CONSULT A TRAINED TECHNICIAN. IMPROPER INSTALLATION COULD RESULT IN SERIOUS INJURY OR DEATH.

WARNING ACCIDENTAL VEHICLE START-UP COULD CAUSE DEATH OR SERIOUS INJURY, REMOVE THE MAIN FUSE BEFORE PROCEEDING.

NOTICE AVOID DAMAGE TO THE MOTORCYCLE. PROTECT PAINTED SURFACES WITH A SOFT CLOTH OR BLANKET.

STEP 2 Refer to PIC 3. Clean the flat spot on the levers with the included alcohol pad and allow the area to dry.



INSTALLATION INSTRUCTIONS

ZOMBIE™ LEVERS FOR TOURING, GLOSS BLACK

1983

-CONTINUED-

NOTICE

ENSURE PROPER ADHESION OF THIS PRODUCT. REMOVE ALL GREASE, OIL, BUGS, DIRT, AND OTHER DEBRIS (INCLUDING WAX AND POLISH) FROM THE INSTALLATION AREA. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST OR DAMAGED DUE TO IMPROPER INSTALLATION.

DO NOT ATTEMPT THIS INSTALLATION IN TEMPERATURES BELOW 50°F (10°C).

STEP 3 Choose which emblem you wish to install (Zombie or Grooved); using the back of your fingernail, rub the backing of the adhesive pad to activate the catalyst.

STEP 4 Refer to PIC 4 and 5. Remove the adhesive backing and install the emblem, ensuring that the aligning pin on the lever will be placed in the hole in the emblem; press and hold the emblem in place for one minute, full bonding strength will occur in 24 hours.

Note: If the motorcycle is to be operated before the 24 hour cure time has expired, use a good quality masking or painter's tape over the Emblem to assist in holding the Emblem in place until the cure time is over.

CLUTCH SIDE

STEP 5 Refer to PIC 6. Remove the snap-ring securing the clutch lever pivot-pin in the perch assembly; save it for later.


STEP 6 Loosen the screws securing the clutch (left-side) handlebar switch housing assembly.

STEP 7 With the clutch housing/lever assembly loosened from the handlebar, remove the pivot pin and lever; set the pivot pin aside, it will be reused.

STEP 8 Refer to PIC 7. Carefully remove the existing clutch lever.

STEP 9 Refer to PIC 8. Ensure that the plastic bushing stays flush as the new Clutch Lever is installed; ensure that the clutch plunger is pressed in and does not bind as the new Lever is installed.

STEP 10 Refer to PIC 9 and 10. Reinstall the pivot pin and secure with the snap-ring. Tighten the clutch (left) side handlebar switch housing assembly screws. Compress the Clutch Lever a few times to ensure that the clutch works properly BEFORE starting the motorcycle.

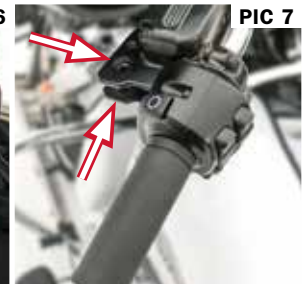

INSTALLATION INSTRUCTIONS

ZOMBIE™ LEVERS FOR TOURING, GLOSS BLACK

1983

-CONTINUED-

BRAKE SIDE

- STEP 11** Remove the snap-ring securing the brake lever pivot-pin in the perch assembly; set it aside for now it will be reused.
- STEP 12** Refer to PIC 11. Loosen the screws securing the brake (right-side) handlebar switch housing assembly.
- STEP 13** With the master cylinder/lever assembly loosened from the handlebar, remove the pivot pin and lever; set the pivot pin aside, it will be reused.
- STEP 14** Refer to PIC 12 and 13. Ensure that the plastic bushing stays flush as the new Brake Lever is installed; ensure that the brake switch and brake plunger are compressed as the lever is installed.
- STEP 15** Reinstall the pivot pin and secure with the snap-ring. Tighten the brake (right) side handlebar switch housing assembly screws. Reinstall the main fuse. Compress the Brake Lever a few times to ensure that the brakes and brake lights works properly BEFORE starting the motorcycle.

NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.

