



## DEEP DISH BEZELS/SMOKE LENSES/AMBER BULBS

## 2270

### PARTS INCLUDED

- 2 Deep Dish Bezels with Smoke Lenses
- 2 Amber Turn Signal Bulbs
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

### THANK YOU FOR CHOOSING KÜRYAKYN!

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.**

**WARNING!** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.


**ATTENTION!** This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

### TOOLS SUGGESTED

Phillips Head Screwdriver, Pliers

**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**

- STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.
- STEP 2** Using a Phillips Screwdriver, remove the screw from the underside of your OEM turn signal assembly and set it aside as it will be reused.
- STEP 3** Remove the OEM lens being careful not to lose the threaded clip on the OEM lens tab or the rubber gasket (labeled as B in PIC.1).
- STEP 4** Use pliers to grip and remove the OEM heat shield (labeled as A in PIC.1). Set this aside, it will not be reused.

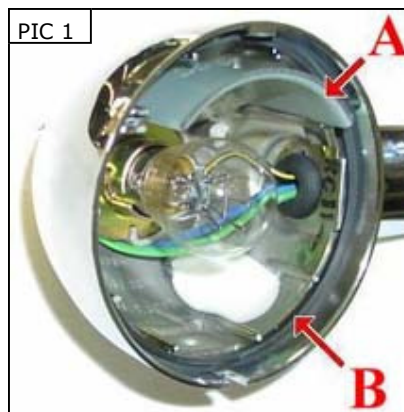

### LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
  - The product must be properly installed, maintained and operated under normal conditions.
- Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
  - Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Küryakyn and a customer.
- Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.
- Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Küryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
  - Küryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

- STEP 5** To remove the OEM turn signal bulb, push it inward and rotate counter clockwise. Gently pull it outward when you feel it come free from the socket.
- STEP 6** Install the supplied amber bulb in the reverse fashion as the OEM bulb was removed.
- STEP 7** Remove the threaded clip from the OEM lens tab and install on the Deep Dish Bezel tab.
- STEP 8** Insert the Deep Dish Bezel into the signal housing while making sure the mounting tab and clip line up with the fastener hole in the lower turn signal housing.
- STEP 9** Reinstall the screw removed in STEP 2 to secure the Deep Dish Bezel to the housing.
- STEP 10** Repeat STEP 2 through STEP 9 for the other side.

**WARNING!** ENSURE PROPER TURN SIGNAL AND/OR RUNNING LIGHT OPERATION BEFORE RIDING THE MOTORCYCLE. VISIBILITY IS A MAJOR CONCERN FOR MOTORCYCLISTS. TURN SIGNAL AND/OR RUNNING LIGHT MALFUNCTION COULD RESULT IN DEATH OR SERIOUS INJURY.

**ATTENTION!** It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

*Ride On!*

PAGE  
**2**

**DEEP DISH BEZEL/AMBER BULB**

**INSTALLATION**