

INSTALLATION INSTRUCTIONS

ORBIT HEADLIGHT ADAPTER FOR INDIAN

2469

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Adapter Bracket
- 2 M8 X 1.25 X 14mm, Button Head Cap Screw
- 2 External Tooth Washer

YOU WILL ALSO NEED:

Metric hex wrench set, Phillips screw driver, wire stripper, electrical and masking tape

NOTICE

THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.

Note: This part is intended to be used with P/N 2460 Orbit Vision 7" L.E.D. Headlight (sold separately) or P/N 2461 Orbit Prism 7" L.E.D. Headlight (sold separately).

STEP 2 Refer to PIC 2. Remove the headlight bezel. Set bezel and mounting hardware aside, they will be reused.

STEP 3 Refer to PIC 3. Remove the hardware that is holding the existing headlight assembly in place, and set it aside until later. Gently take the headlight assembly out, disconnect the wires, and set aside.

STEP 4 Remove existing headlight trim. Remove the headlight and plastic carrier from the bracket. Set all hardware and the bracket aside, they will be reused.

Note: Pay attention to where all of the hardware is being removed from, it will be helpful for re-installation later.



INSTALLATION INSTRUCTIONS


ORBIT HEADLIGHT ADAPTER FOR INDIAN

2469


-CONTINUED-

STEP 5 Refer to PIC 6. Locate provided Orbit Headlight Adapter, two (2) 14mm screws, and two (2) external tooth washers.

Place on a flat clean surface, with the headlight upside down, as seen in PIC 6.

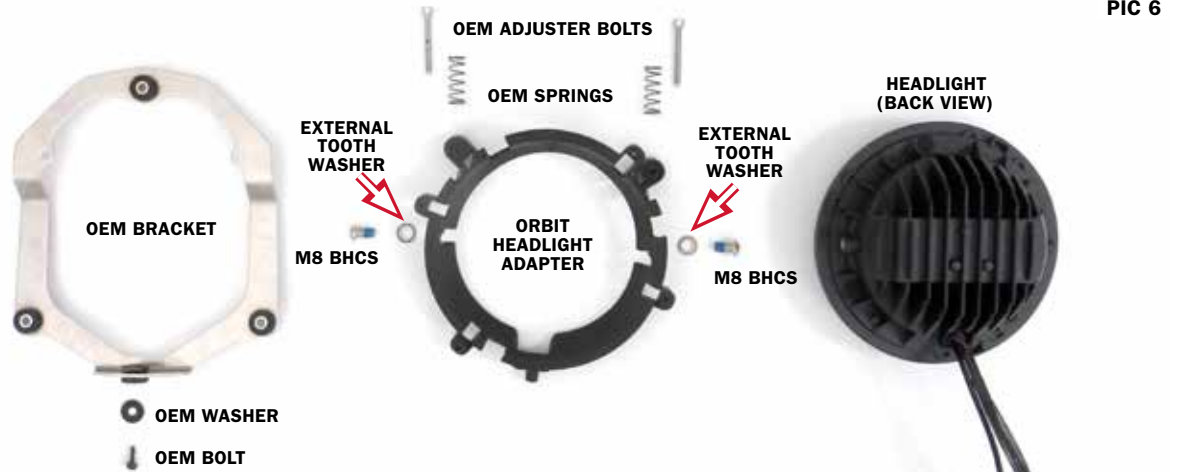

STEP 6 Refer to PIC 7. Align the Orbit Headlight Adapter with the OEM bracket. The top two bracket arms of the Headlight Adapter should be placed under the bracket, and the bottom boss on the adapter should align and insert into the rubber grommet on the bottom of the OEM bracket.

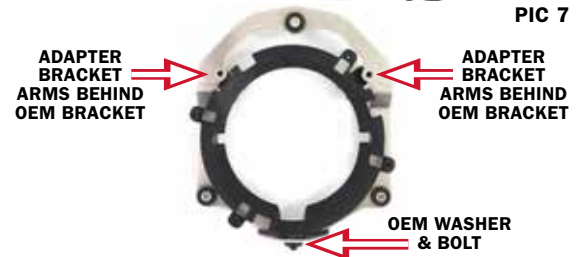


STEP 7 Refer to PIC 7. Locate the OEM washer and screw that were removed from the bottom of the OEM bracket and carrier in Step 4. Place the washer onto the bolt, and insert through the bottom mounting holes of the bracket and adapter.



STEP 8 Refer to PIC 8. Feed the wires of the headlight through the bracket assembly and place it on top.



STEP 9 Refer to PIC 8 and 9. Place an external tooth washer onto each of the 14mm screws. Fasten the headlight to the Orbit Headlight Adapter, from the left and right side. Fully tighten hardware.

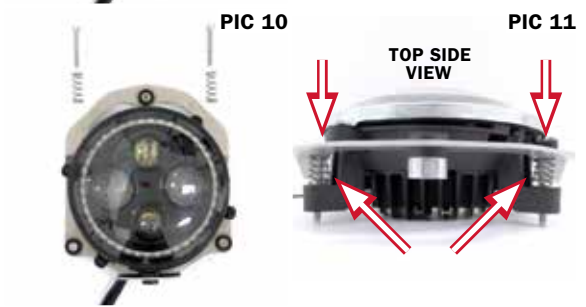

STEP 10 Refer to PIC 10. Locate OEM springs and headlight adjuster bolts that were removed from the original bracket and carrier in Step 4.

STEP 11 Refer to PIC 11. Align the two bracket arms at the top of the Orbit Headlight Adapter with the OEM bracket. Place a spring in between the adapter bracket arms and the OEM bracket. From the top of the OEM bracket, insert the headlight adjuster bolts through the mounting holes of the OEM bracket, the springs, and bracket arms of the adapter. Lightly tighten the screw until brackets are fastened together.

INSTALLATION INSTRUCTIONS

ORBIT HEADLIGHT ADAPTER FOR INDIAN

2469

-CONTINUED-

STEP 12 Refer to PIC 12 and 13. Locate the OEM trim and mounting hardware that was removed from the headlight in Step 4. Align and fasten the trim to the adapter. Fully tighten hardware.



STEP 13 Refer to installation instructions provided with the Orbit Vision Headlight (P/N 2460) or the Orbit Prism Headlight (P/N 2461), starting at STEP 10, for wiring installation of the Orbit headlight.



NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.