

## INSTALLATION INSTRUCTIONS

### FENDER STRUT COVER PLATES, GLOSS BLACK

2578

#### THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

**WARNING** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

**CAUTION** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

**NOTICE** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

#### ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 2 Adapter Plate
- 2 M8 x 1.25 Flange Lock Nut

#### YOU WILL ALSO NEED:

Combination wrench set

PICTURES SHOWN ARE OF THE CHROME PARTS. INSTALLATION OF THE BLACK PARTS WILL BE THE SAME.

**NOTICE** THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.

*Note: Installation will vary between motorcycles.*

**STEP 2** Remove existing rear lights and mounting hardware. Set them aside, they will not be reused.

*Note: Refer to your motorcycle's service manual for assistance in removal of the lights.*

*Note: Refer to the installation instructions provided with the Kuryakyn by Kellermann lights for proper installation of the lights.*

**STEP 3** Locate a provided Adapter Plate.

**STEP 4** Align and place the Adapter Plate over the rear light's mounting hole.

**STEP 5** Feed the wire of the light through the mounting hole of the adapter and fender strut and/or fender. Insert the threaded bolt end of the light through the mounting hole.

**STEP 6** Locate provided Flange Lock Nut. Secure light and adapter to the rear light mount using the Flange Lock Nut. Fully tighten hardware.

**STEP 7** Repeat Steps 3 through 5 on the opposite side.




ADAPTER PLATES



FLANGE LOCK NUTS

PIC 1

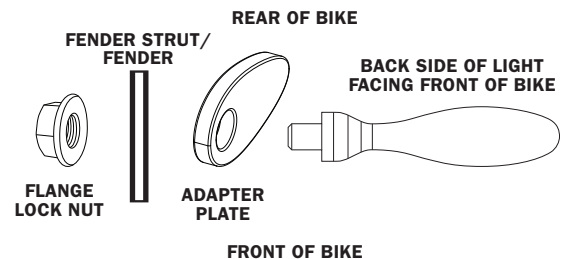

PIC 1



## INSTALLATION INSTRUCTIONS

### FENDER STRUT COVER PLATES, GLOSS BLACK

2578

-CONTINUED-

#### NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.