

INSTALLATION INSTRUCTIONS

TRACER L.E.D. INSERTS FOR SADDLEBAG SUPPORTS

2900

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

- WARNING** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.
- CAUTION** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.
- NOTICE** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

1	Right Saddlebag Support Insert	4	#8 x 1/2" Hi-Low Self Tapping Pan Head Screws
1	Left Saddlebag Support Insert	4	Brackets
1	Run/Turn/Brake Wiring Adapter	8	6" Cable Ties

YOU WILL ALSO NEED:

#2 Phillips screwdriver, torx wrench set, dielectric grease

- NOTICE** THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.
- WARNING** YOU WILL BE WORKING AROUND THE EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE EXHAUST SYSTEM HAS FULLY COOLED TO PREVENT INJURY.

- NOTICE** AVOID DAMAGE TO THE MOTORCYCLE AND PARTS. PROTECT PAINTED SURFACES WITH A SOFT CLOTH OR BLANKET.

- STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool. Remove main fuse.
- STEP 2** Remove the motorcycle's seat to gain access to the battery and rear lights wiring harness. Set the seat on a flat clean surface off to the side.
- STEP 3** Refer to PIC 2. Locate provided Run/Turn/Brake Wiring Adapter. Disconnect the rear lights from the existing wiring harness. Apply a small amount of dielectric grease to each end of the controller connectors. Connect the adapter to the bike's rear lights and wiring harness.
- STEP 4** Locate provided Left and Right Saddlebag Support Inserts. Connect the lights to the wiring adapter.





INSTALLATION INSTRUCTIONS

TRACER L.E.D. INSERTS FOR SADDLEBAG SUPPORTS

2900

-CONTINUED-

- STEP 5** Reinstall main fuse and test lights for proper run/turn/brake operations. Disconnect lights after operational testing. Set them aside for the time being. Remove main fuse.
- STEP 6** Refer to PIC 3. Remove the left and right saddlebags; set them on a soft sturdy surface. Refer to your specific model owner's manual for more information.
- STEP 7** Refer to PIC 4 and 5. Locate provided Left and Right (brake-side) Saddlebag Support Insert, four (4) Pan Head Screws and four (4) Brackets. Working on a clean surface, align two (2) brackets over the holes on the back side of the insert. With the brackets parallel to the insert, loosely fasten them to the insert using two (2) pan head screws. Brackets should be loose enough to be able to rotate them.
- STEP 8** Refer to PIC 6 and 7. Feed the wire through the rear side of the saddlebag support. Align and place the insert assembly on the rear side of the support. Once properly in place twist the brackets perpendicular to the panel (PIC 7), so that it catches on the inside of the saddlebag support.
- STEP 9** Fully tighten the screws to secure the Saddlebag Support Insert in place.
- STEP 10** Route the wire along the inside of the rear fender and towards the wiring harness under the seat area. Connect the lights to the wiring harness.
- STEP 11** Refer to PIC 8. Repeat Steps 8 through 10 for the opposite side.
- STEP 12** Use provided Cable Ties to secure all cords in a safe place. Ensure that cords are secured away from any moving parts, excessive heat or pinch points.
- NOTICE** SECURE ALL WIRING AWAY FROM ANY MOVING PARTS, PINCH POINTS OR EXTREME HEAT. KURYAKYN WILL NOT ISSUE A WARRANTY ON ANY ELECTRICAL COMPONENT THAT FAILS DUE TO PINCHED, CRIMPED, BROKEN, ABRADED, MELTED OR FRAYED WIRES.
- STEP 13** Reinstall the main fuse; ensure all of the lights properly function before operating the motorcycle.
- STEP 14** Reinstall the saddlebags and the seat.

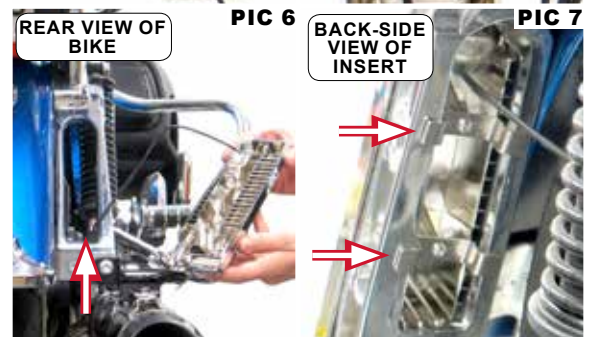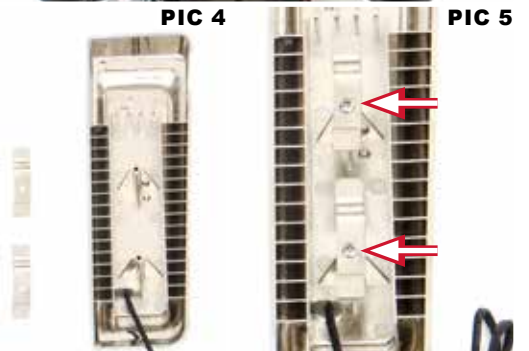



INSTALLATION INSTRUCTIONS

TRACER L.E.D. INSERTS FOR SADDLEBAG SUPPORTS

2900

-CONTINUED-

WARNING

ENSURE PROPER LIGHT OPERATION BEFORE RIDING THE MOTORCYCLE. VISIBILITY IS A MAJOR CONCERN FOR MOTORCYCLISTS. A LIGHT MALFUNCTION COULD RESULT IN DEATH OR SERIOUS INJURY.

NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.
